



# SERVICE MANUAL

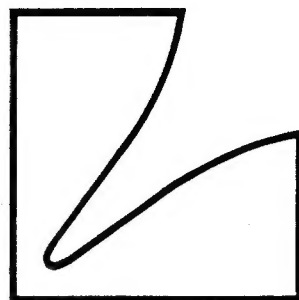

Compact Disc Player

## DZ-112

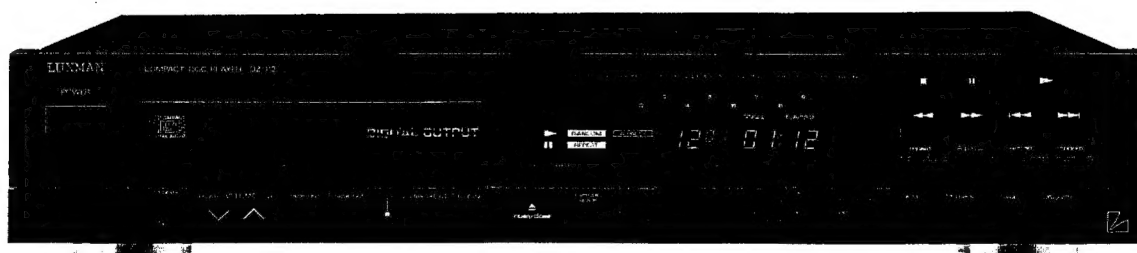

## Contents


Specifications .....	2
Controls & Switches-Front Panel .....	3 to 5
Jacks & Terminals-Rear Panel .....	6
Controls & Switches-Remote Controller .....	7
Disassembly Instructions .....	8
Adjustment Procedures .....	9 to 10
Adjustment Locations .....	11
Block Diagram .....	12
Parts Layout on P. C. Boards and Wiring Diagram .....	13 to 16
Schematic Diagram (1/2) .....	17 to 19
Schematic Diagram (2/2) .....	20 to 22
Electrical Parts List .....	23 to 27
Cabinet Assembly Parts List .....	28
Exploded View (Cabinet) .....	29 to 30
Exploded View (CD Mechanism) .....	31 to 32
CD Mechanism Assembly Parts List .....	33
Packing Assembly Parts List .....	34
Packing Method View .....	34
Semi-conductor Lead Identifications .....	35 to 40

## Specifications

Systems .....	Optical (Compact Disc System)
Quantizing Bit Number .....	16 Bit Linear System
Channels .....	2 Channels, Stereo
Pick-up .....	Semi-conductor Laser Pick-up
Output Voltage .....	2V $\pm$ 1dB
Frequency Response .....	5~20kHz $\pm$ 1dB
T.H.D.(1kHz) .....	0.008%
S/N Ratio .....	99dB
Dynamic Range .....	91dB
Channel Separation (1kHz) .....	90dB
Headphone Output Voltage (1kHz, -10dB/8 ohm) .....	150mV $\pm$ 1dB
Power Supply .....	AC120/220/240V, 50Hz (General European and West German Models Only) AC120V, 60Hz (North American and Canadian Models Only) AC240V, 50Hz (England Model Only)
Power Consumption .....	15W
Semi-conductors .....	21 IC's, 24 Transistors, 2 FETs, 19 Diodes, 3 Zener Diodes
Dimension (W $\times$ H $\times$ D) .....	438 $\times$ 85 $\times$ 311 (mm)
Weight .....	4.5kg

**NOTE:** Due to continuing product improvement, specifications and designs are subject to change without notice.

# CONTROLS & SWITCHES — FRONT PANEL

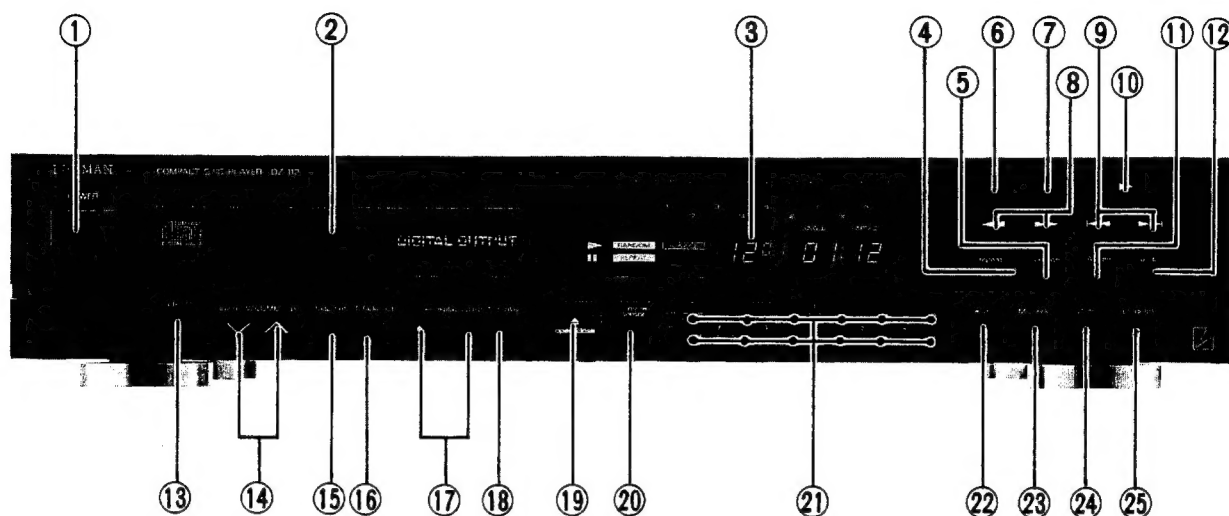

## 1. POWER BUTTON

Press this button to turn power on and off to the unit. The contents of the programmed play, random play and edit play are kept in memory even if the power is turned off. When one of the programmed play, random play and edit play functions has been set, the programmed operation will start when the power is turned on. When no programmed operation has been set, normal playback will start from the first track on the disc.

## 2. DISC TRAY

Place a disc on this tray, label side up. A light touch on the tray, when open, will cause it to retract back into the unit ready for play. Pressing PLAY, STOP, PAUSE, A-SCAN or any of the DIRECT ACCESS buttons will also close the tray and cause the unit to go into immediate play operation.

**NOTE:** To use 8 cm (3 inch) single CD's, place them on the inner circular grooved area marked "8 cm disc" on the tray.

## 3. VACUUM FLUORESCENT DISPLAY

Track, index, time and programming functions are all simultaneously shown in this display. Refer to "operation guidelines" for details.

## 4. REPEAT Button

In normal play or random play mode, press this button to repeat all tracks on a disc.

In programmed play or edited play mode, pressing this button will repeat only those programmed or edited.

Pressing the "repeat" button a second time, will cancel the repeat function.

## 5. A-PAUSE (AUTO PAUSE) Button

Pressing this button will cause the machine to activate PAUSE automatically at the end of any currently playing track. To resume play, press the PLAY button. While the auto pause function is activated, A-PAUSE will show in the display.

## 6. STOP (reset) Button (■)

One press of this button will stop playback and return the pick-up to the beginning of the disc. A second push will clear (reset) all memory contents.

**NOTE:** The total number of tracks and the total playing time on the disc will always show on the display in the STOP mode.

# CONTROLS & SWITCHES — FRONT PANEL

## 7. PAUSE Button ( || )

Press this button to temporarily cease playback or to cue up a track or segment for recording, etc. To resume playback, press the "pause" button again or press the play button.

**NOTE:** Fast Forward/Backward scan and skip operations (items #9 and 8) are still operable in the "pause" mode.

## 8. FAST FORWARD/BACKWARD SCAN Buttons ( << , >> )

When pressed, these buttons provide fast forward or backward scan within a track (music) selection. To more than double these scan speeds, press the "pause" button (item #7) first.

## 9. FORWARD/BACKWARD SKIP Buttons ( <<< , >>> )

These buttons allow one to "skip" forward or backward over any track in one track increments.

Pressing backward ( <<< ) once will cause return to the beginning of the current track; a second immediate push will cause a skip back to the preceding track.

When the pick-up comes to the first selection, the next push will cause it to go to the beginning of the last selection on the disc.

Pressing forward ( >>> ) will cause the player to skip forward, one track at a time for each successive push. When the last selection is reached, the next push will return the pick-up to the first track.

## 10. PLAY Button ( ▶ )

Press PLAY button when loading a disc for immediate playback beginning at track 1 and for starting a programmed sequence.

## 11. A-SCAN (AUTO SCAN) Button

Press this button to successively play a beginning of each track for ten seconds. During the auto scanning mode, the A-SCAN indicator will appear on the display.

## 12. RANDOM Button

Press this button to automatically play tracks at random. During the random play, the RANDOM indicator will appear on the display.

## 13. PHONES Jack

Use the "phones" jack to connect stereo headphones for private listening.

## 14. VOLUME UP/DOWN Buttons

Controls volume level of connected stereo headphones and the VARIABLE ANALOG OUTput jacks on the rear panel. When activated, the output level, as measured in db below maximum output, is shown in the display.

## 15. FADE-OUT Button

Use this button to gradually decrease the output level of the VARIABLE ANALOG OUTput jacks on the rear panel and the **phones** jack. When the fade-out completes, the unit enters the pause mode and the output level automatically returns to the original level.

## 16. T-FADE OUT (Time Fade Out) Button

Use this button to gradually decrease the output level of the VARIABLE ANALOG OUTput jacks on the rear panel and the **phones** jack after a length of play time as specified by the Direct Access select buttons. When the fade-out completes, the unit will enter the pause mode and the output level automatically returns to the original level.

## 17. DISPLAY ADJUST Button/Indicator

This button adjusts brightness of the display in four steps and also turns the display off. The red indicator lights up and stays lit in the 3 dimmed positions and in the display "off" position.

## 18. T-DISPLAY Button

Each push of this button selects one of 4 disc timing displays as follows:

- "Single Elapsed" — Time elapsed since beginning of current track.
- "Single Remain" — Play time remaining on current track.
- "Total Elapsed" — Time elapsed since beginning of total disc.
- "Total Remain" — Play time remaining on entire disc.

## CONTROLS & SWITCHES — FRONT PANEL

**NOTE:** When in program play mode, the remaining times displayed will be that of the selections programmed, not the entire disc.

In the RANDOM play mode, the display will not show Total Elapsed or Total Remain times. (This is not a malfunction.)

### 19. OPEN/CLOSE Button

Press to open or close the disc tray (See also item #2).

### 20. REMOTE SENSOR

When using the hand held remote control, it must be pointed toward this sensor to activate operational functions.

### 21. DIRECT ACCESS SELECT Buttons

Use for immediate play of any track from 1 to 99 or, in conjunction with the "program" button, select up to 32 tracks in any order for programmed operation.

Also, use these buttons for the edit play and time setting for the Time Fade Out function.

### 22. EDIT Button

For convenience in tape recording, this button will cause automatic grouping of tracks that can be recorded within the time specified for any given tape type used (C-60, C-90, etc.). That is, when recording time for one side of the tape is set with the Direct Access Select buttons while the EDIT is blinking on the display after the Edit button is pressed, the tracks that can be recorded for both sides of the tape within the specified time are programmed automatically.

### 23. M-CHECK Button

Use this button to check the order of the selections that have been programmed. With each successive push of this button, the track numbers that have been programmed will be shown to the left and the programmed order to the right, in the track display area (the time portion of the display will turn off).

**NOTE:** M-Check operates only in the "Stop" mode.

### 24. CLEAR Button

This function allows track by track clearing, in sequence, of any programmed track, beginning with the last track programmed. With each push of this button, the next track to be cleared will appear in the Track No. Display and the red frame around the last programmed track No. will disappear.


**NOTE:** "Clear" operates only in the "Stop" mode.

### 25. PROGRAM Button

Use this button in conjunction with the "Direct Access Select" buttons (item #21) to program up to 32 track selections in any random order. To clear program contents, press the STOP button twice.

**NOTE:** Pressing the **program** button will toggle between the selections programmed into memory and normal play operation. This allows one to temporarily go to normal play operation, if desired, without losing the stored program. To recover the program, simply press **program** again!

## JACKS & TERMINALS — REAR PANEL

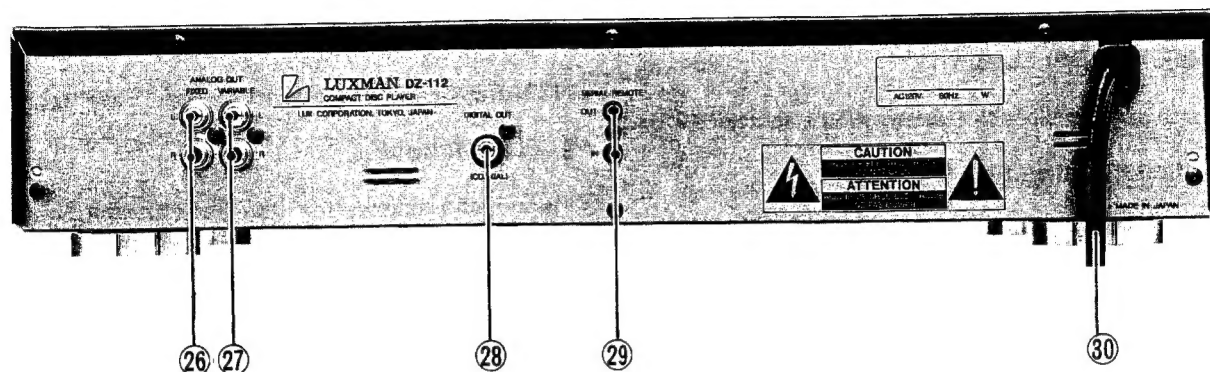

### 26. ANALOG OUTPUT Jacks (Fixed)

For connection to the CD inputs of any amplifier or receiver. The output level is 2 volts fixed, referenced to 0 dB recording level.

### 27. ANALOG OUTPUT Jacks (Variable)

For connection to the CD inputs of any amplifier or receiver. The output level can be adjusted using the VOLUME UP/DOWN buttons.

### 28. DIGITAL OUTPUT Jack — Coaxial

Use this output for connection to a matching amplifier having a patch cord (coaxial) phono jack type digital input (such as the Luxman LV-113 or LV-117).

### 29. SERIAL REMOTE IN/OUT Jacks


Use these jacks for simple and convenient connection to other Luxman components for System Remote Control operation. Connect these Serial Remote In and Out jacks to the Serial Remote Out and In jacks, respectively, on other Luxman components (in daisy chain fashion), for a unified remote control system.

**NOTE:** Turn the power off before connecting these jacks.

### 30. AC POWER CORD

Insert the polarized AC plug of the DZ-112 into any 120 volt AC/60 Hz wall outlet, or, preferably, into the unswitched outlet of the amplifier or receiver used with it.

## CONTROLS & SWITCHES — REMOTE CONTROLLER

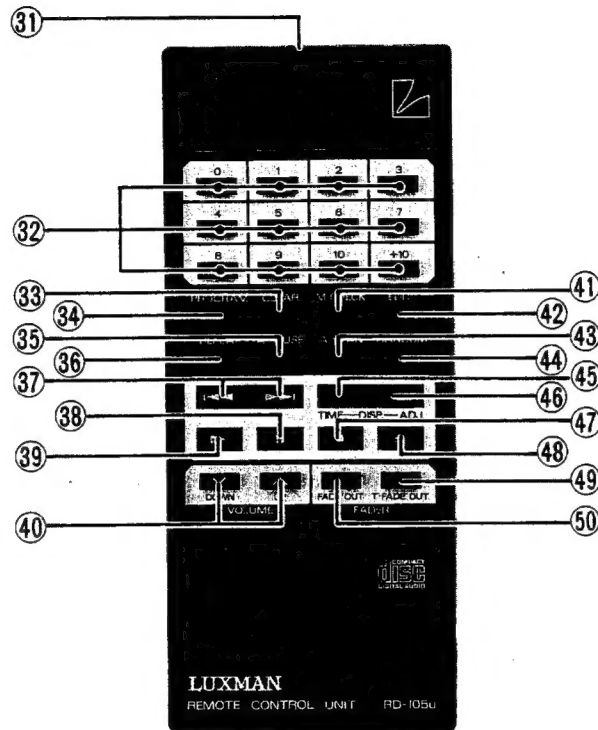

### REMOTE CONTROLLER RD-105u

**NOTE:** Operation is the same as for the buttons on the front panel of the DZ-112.

- |                                   |                              |
|-----------------------------------|------------------------------|
| 31. TRANSMISSION WINDOW           | 41. M-CHECK Button           |
| 32. DIRECT ACCESS (TRACK) Buttons | 42. EDIT Button              |
| 33. CLEAR Button                  | 43. A-SCAN Button            |
| 34. PROGRAM Button                | 44. RANDOM Button            |
| 35. A-PAUSE Button                | 45. TIME DISPLAY Button      |
| 36. REPEAT Button                 | 46. DISPLAY ADJUST Button    |
| 37. FORWARD/BACKWARD SKIP Buttons | 47. STOP Button              |
| 38. PAUSE Button                  | 48. OPEN/CLOSE (TRAY) Button |
| 39. PLAY Button                   | 49. T-FADE OUT Button        |
| 40. VOLUME UP/DOWN Buttons        | 50. FADE OUT Button          |

# Disassembly Instructions

## 1. Removal of CD Mechanism

- (1) After removal of the top cover, open the disc tray.
- (2) Remove the panel tray in the arrow direction as shown in Figure 1.
- (3) Remove three screws marked "O" as shown in Figure 2.
- (4) Disconnect all wires from the CD Mechanism.

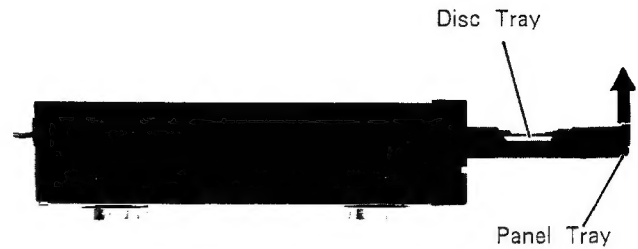


Figure 1

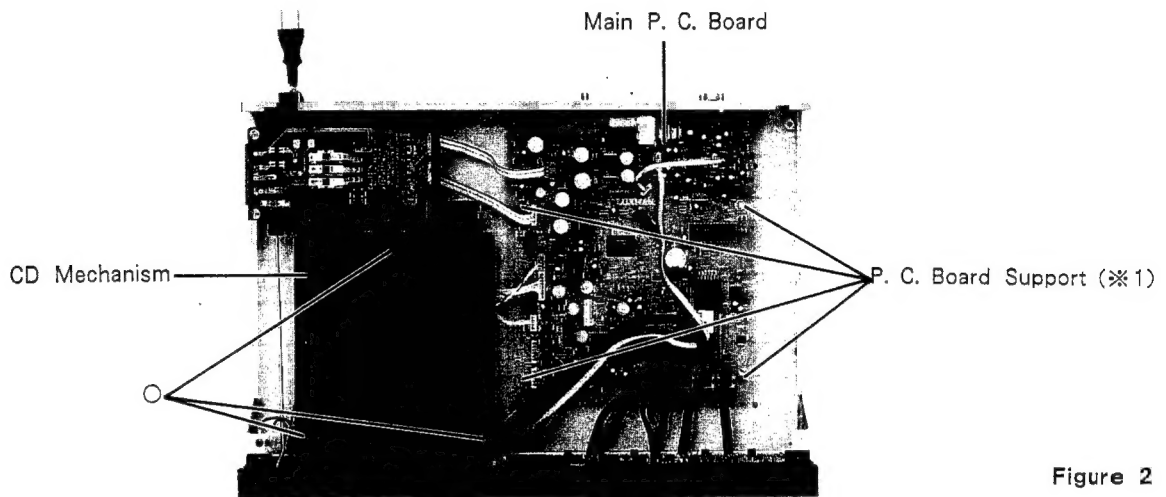


Figure 2

## 2. Removal of Front Panel and Logic/Fader/Phone P. C. Board

- (1) After removal of Front Panel, remove six screws marked "x" as shown in Figure 3.
- (2) Remove six hooks as shown in Figure 3.
- (3) Disconnect a connector from the Logic P. C. Board.

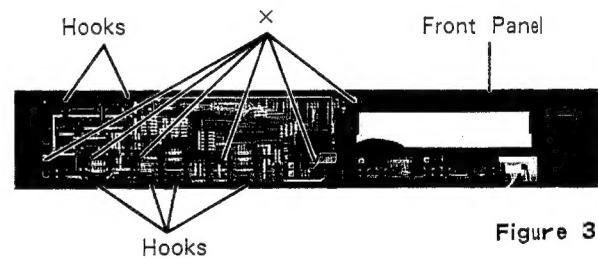


Figure 3

## 3. Removal of Main P. C. Board

- (1) After removal of the top cover, remove three screws marked "Δ" as shown in Figure 5.
- (2) Remove four P. C. Board supports (※1) from Main P. C. Board as shown in Figure 2, by pushing the point "A" as shown in Figure 4.
- (3) Disconnect all connectors from Main P. C. Board.

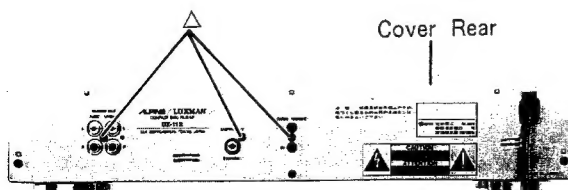


Figure 5

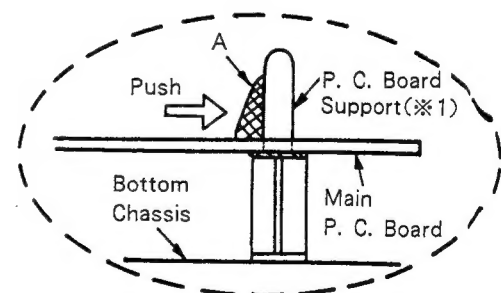


Figure 4

# Adjustment Procedures

## (1) Connection Diagrams

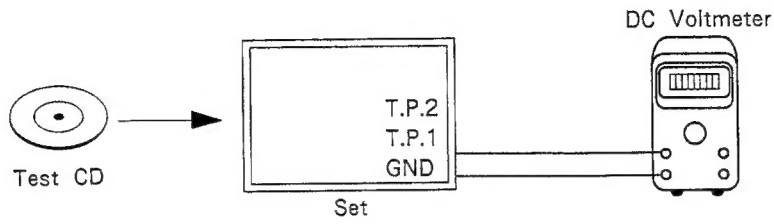


Figure 6

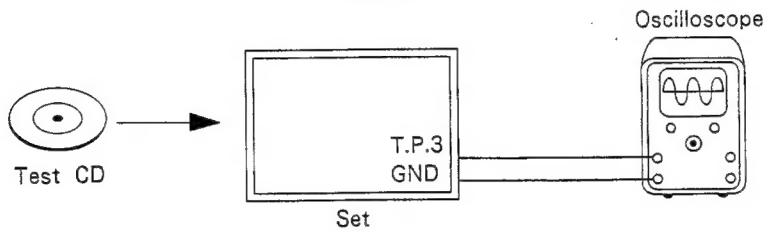


Figure 7

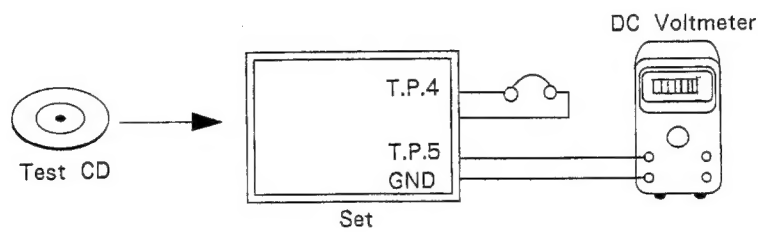


Figure 8

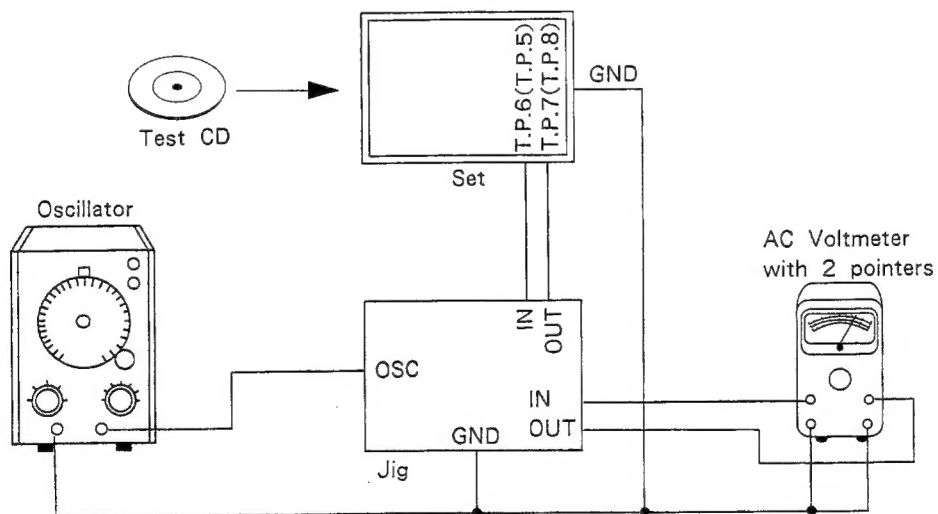


Figure 9

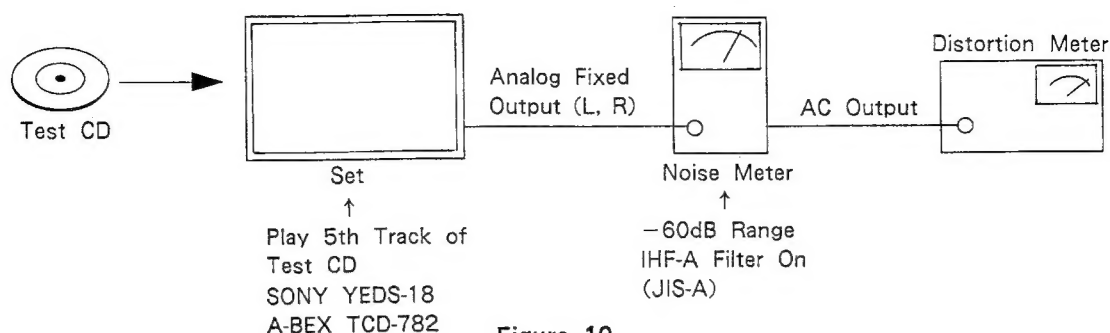


Figure 10

## (2) Switch Settings

Power Switch ..... ON  
 Play Switch ..... ON  
 Others ..... OFF

Step	Description	Connection	Oscillator Input	Test Point	Adjustment
1	VCO Adjustment	Figure 6	—	T.P.1 T.P.2	Measure the voltage at T.P.1. Then adjust VR1303 so that the output voltage at T.P.2 becomes 1/2 of the voltage at T.P.1.
2	Focus Bias Adjustment	Figure 7	—	T.P.3	Adjust VR1202 to obtain at T.P.3 the maximum output waveform similar to that shown in Figure 11.
3	Tracking Error Balance Adjustment	Figure 8	—	T.P.4 T.P.6	Short circuit T.P.4 and fully rotate RC1301 in a counterclock direction. Then adjust VR1201 so that the output voltage at T.P.6 becomes $0 \pm 10$ mV. After completing the adjustment, rotate VR1301 back to near its center position.
4	Tracking Gain Adjustment	Figure 9	1kHz 100mV	T.P.6 T.P.7	Adjust VR1301 so that one pointer of the AC voltmeter comes above the other one.
5	Focus Gain Adjustment	Figure 9	1kHz 100mV	T.P.5 T.P.8	Adjust VR1302 so that one pointer of the AC voltmeter comes above the other one.
6	D/A Converter MSB Adjustment	Figure 10	—	Analog Fixed Output	Play back the -60dB 1kHz signal (5th track) of the test CD (SONY YEDS-18, A-BEX TCD-782) and amplify by 60dB using the noise meter encoded with the IHF-A (JIS-A) curve. Then measure the distortion rate on the AC output of the noise meter, and adjust separately VR1404 for the right channel and VR1403 for the left channel.

## ※Test CD

SONY YEDS-18 (Second track) → Tracking Error Balance Adjustment  
 SONY YEDS-18 (Second track) → Other Adjustments  
 A-BEX TCD-782 (Second track) → Tracking Error Balance Adjustment  
 A-BEX TCD-782 (Second track) → Other Adjustments


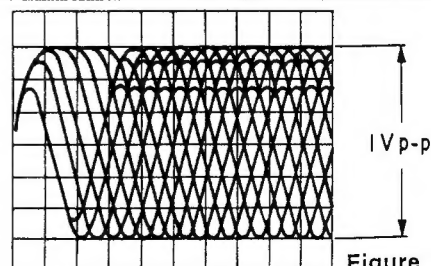


Figure 11


## Adjustment Locations

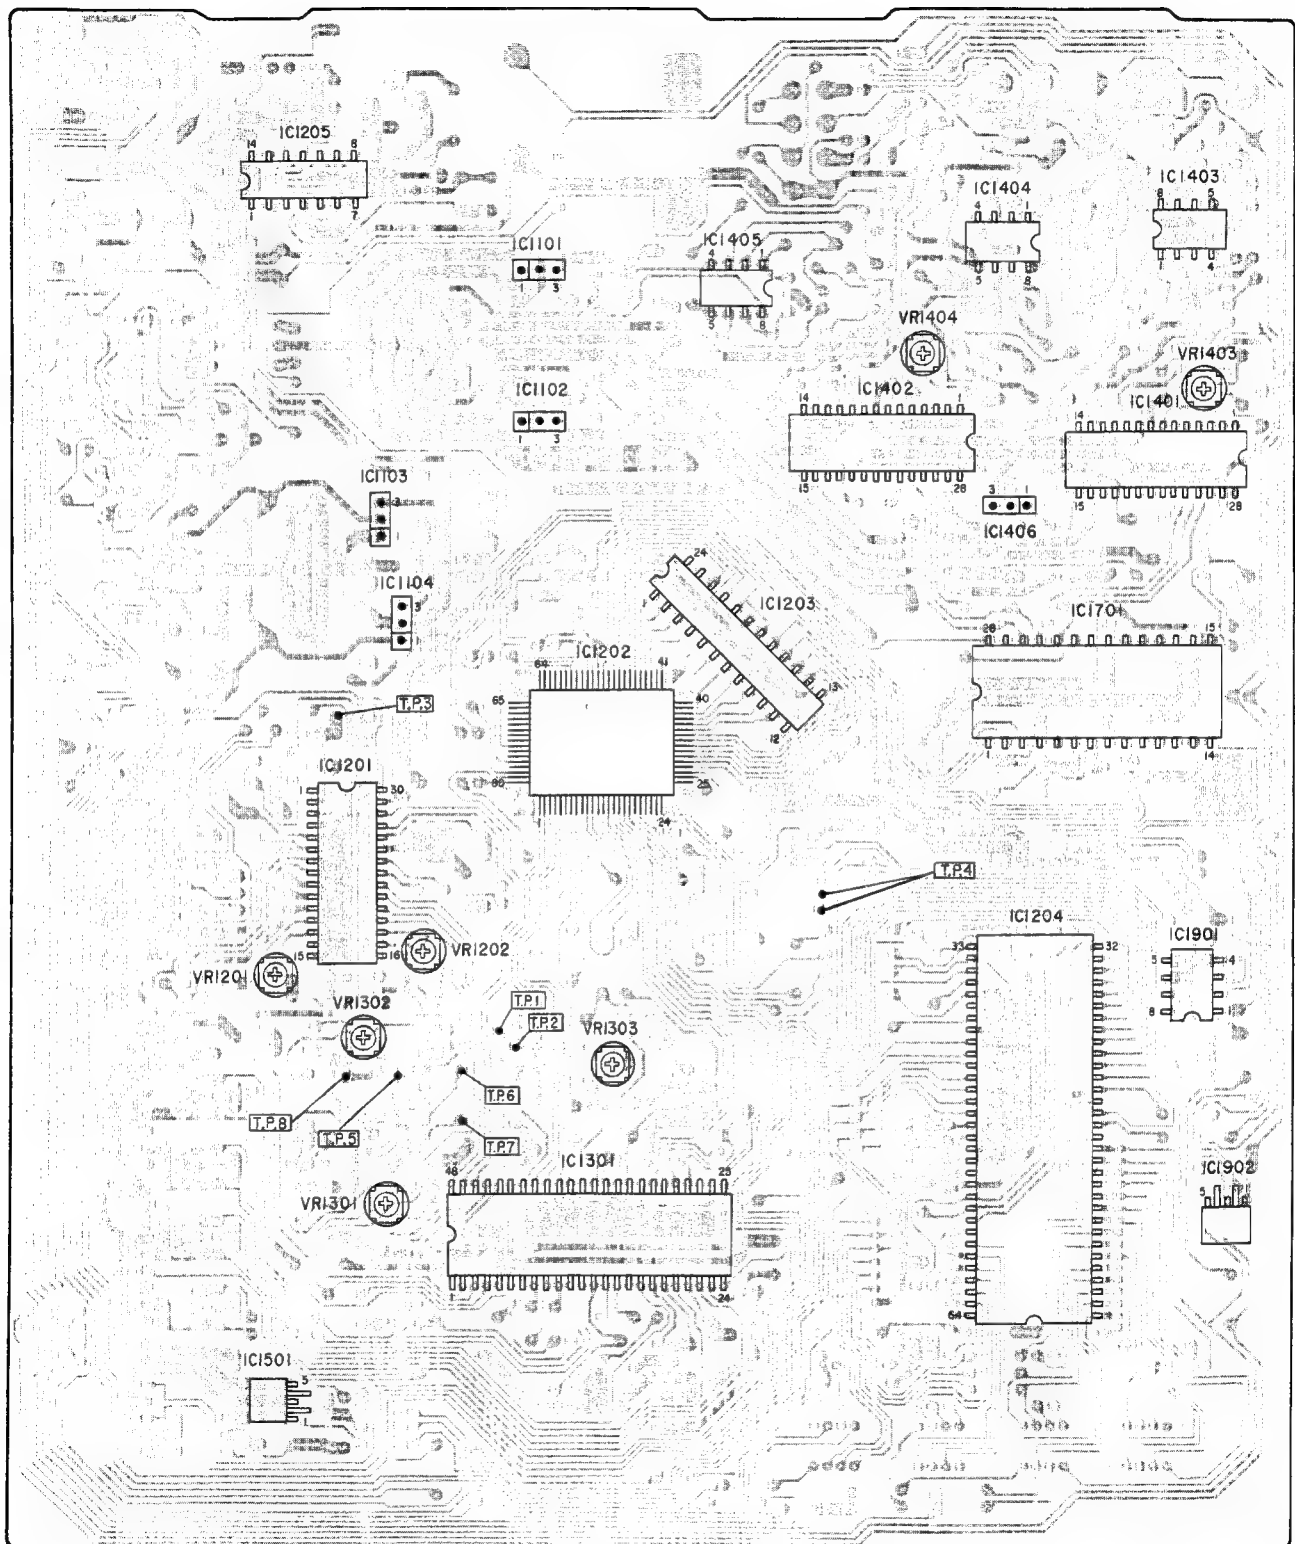

Main P. C. Board (Component Side View)

Figure 12

# Block Diagram

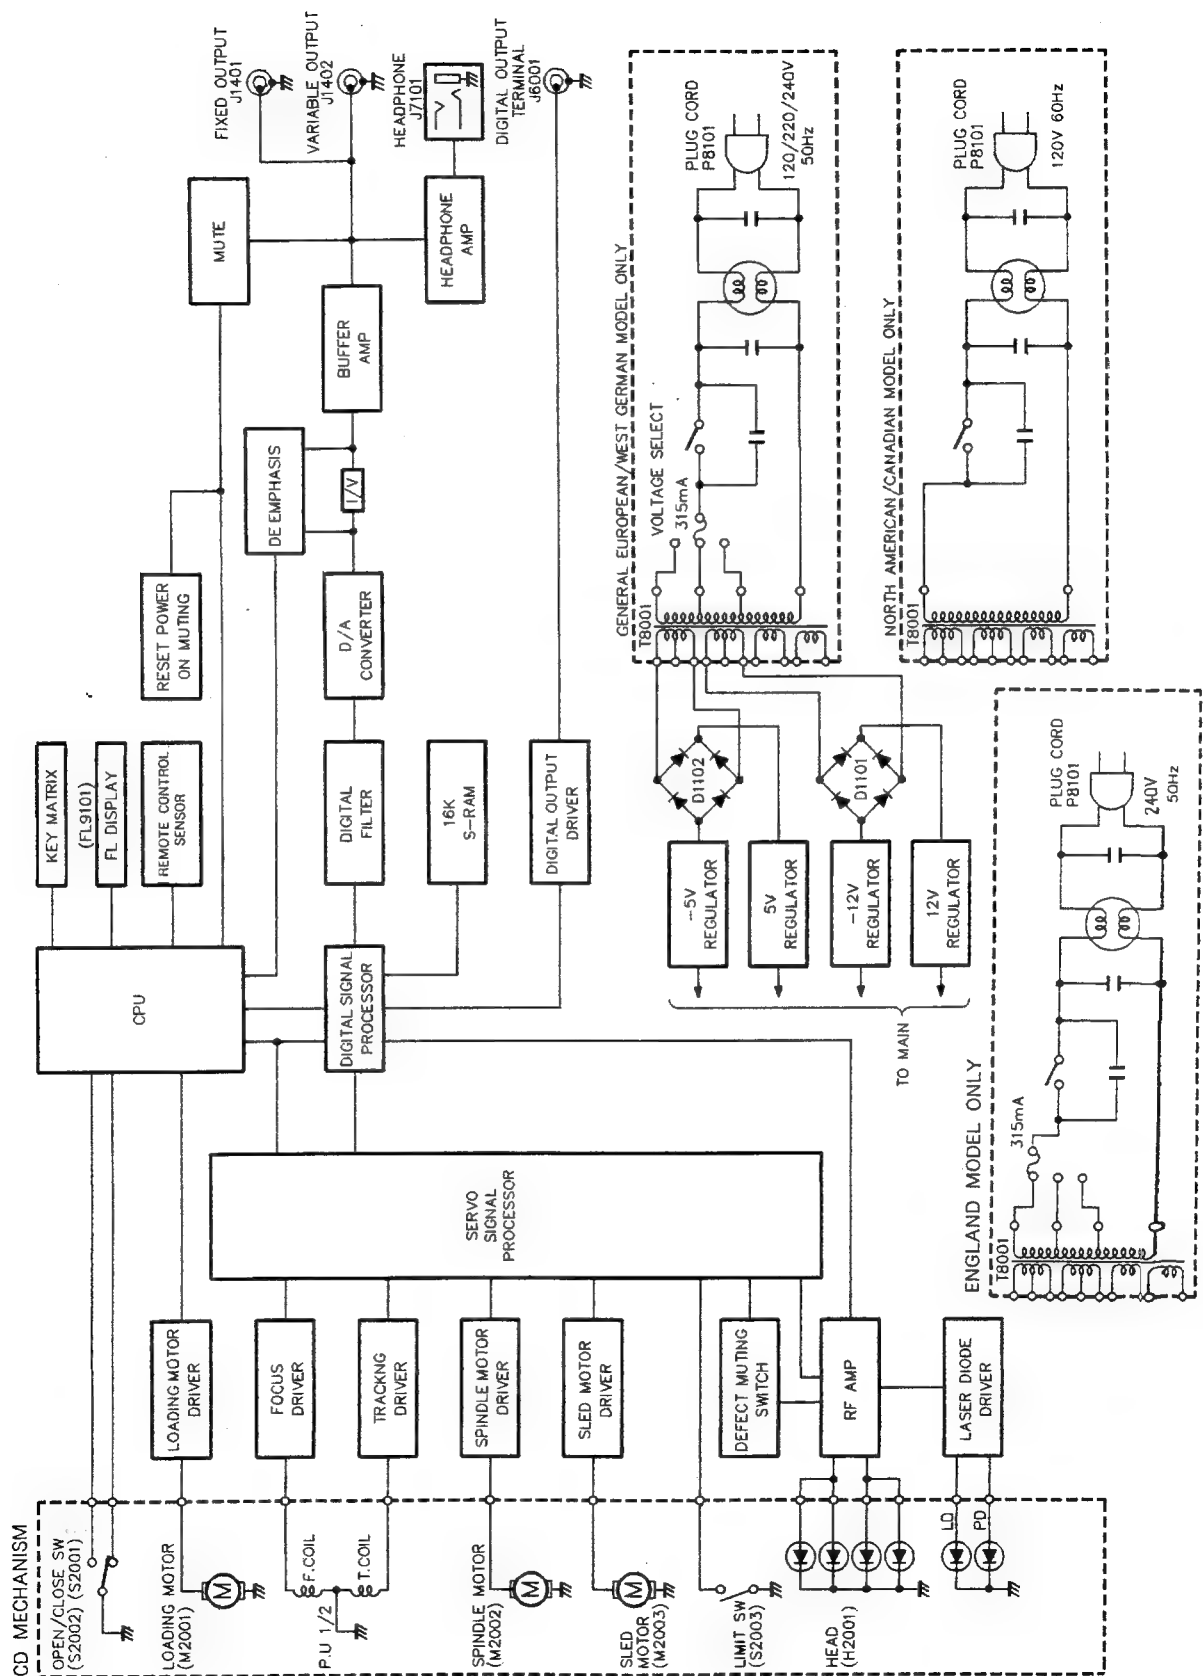


DZ-112

DZ-112

# Parts Layout on P.C. Boards and Wiring Diagram

Head, Optical Pickup (HD2001)

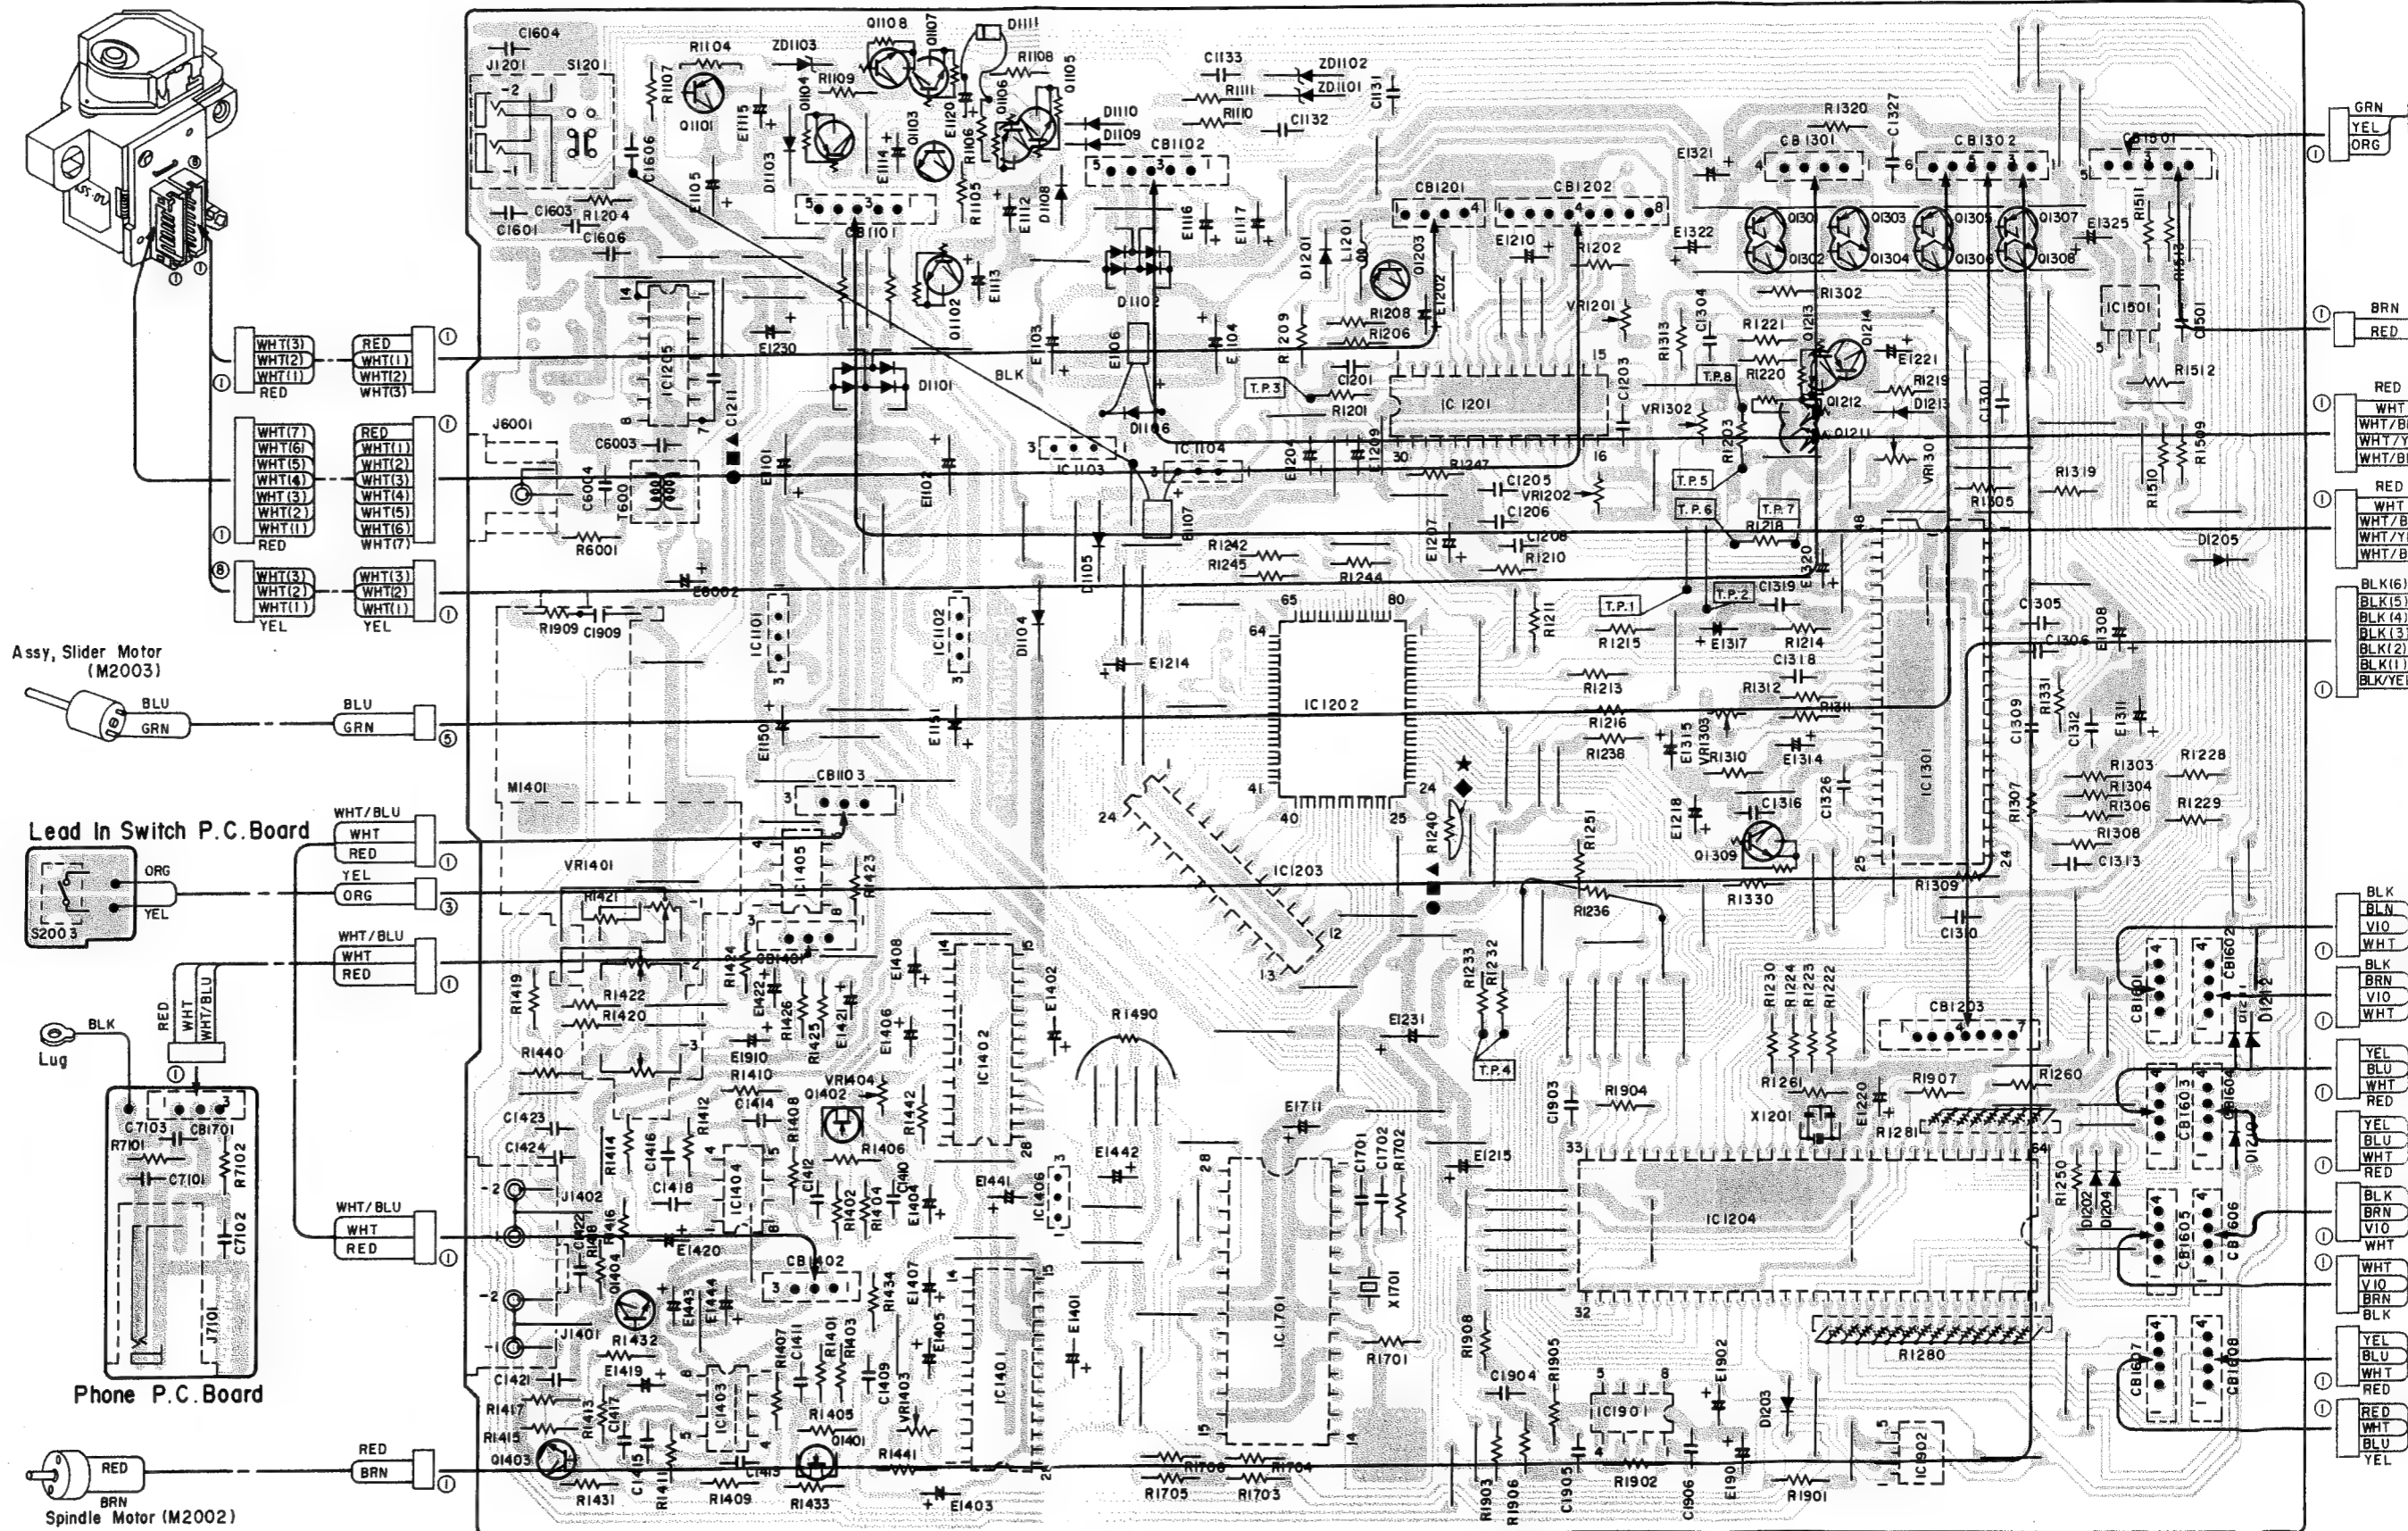

Main P.C. Board

A

B - 13 -

C


D

E

F - 14 -

G

H

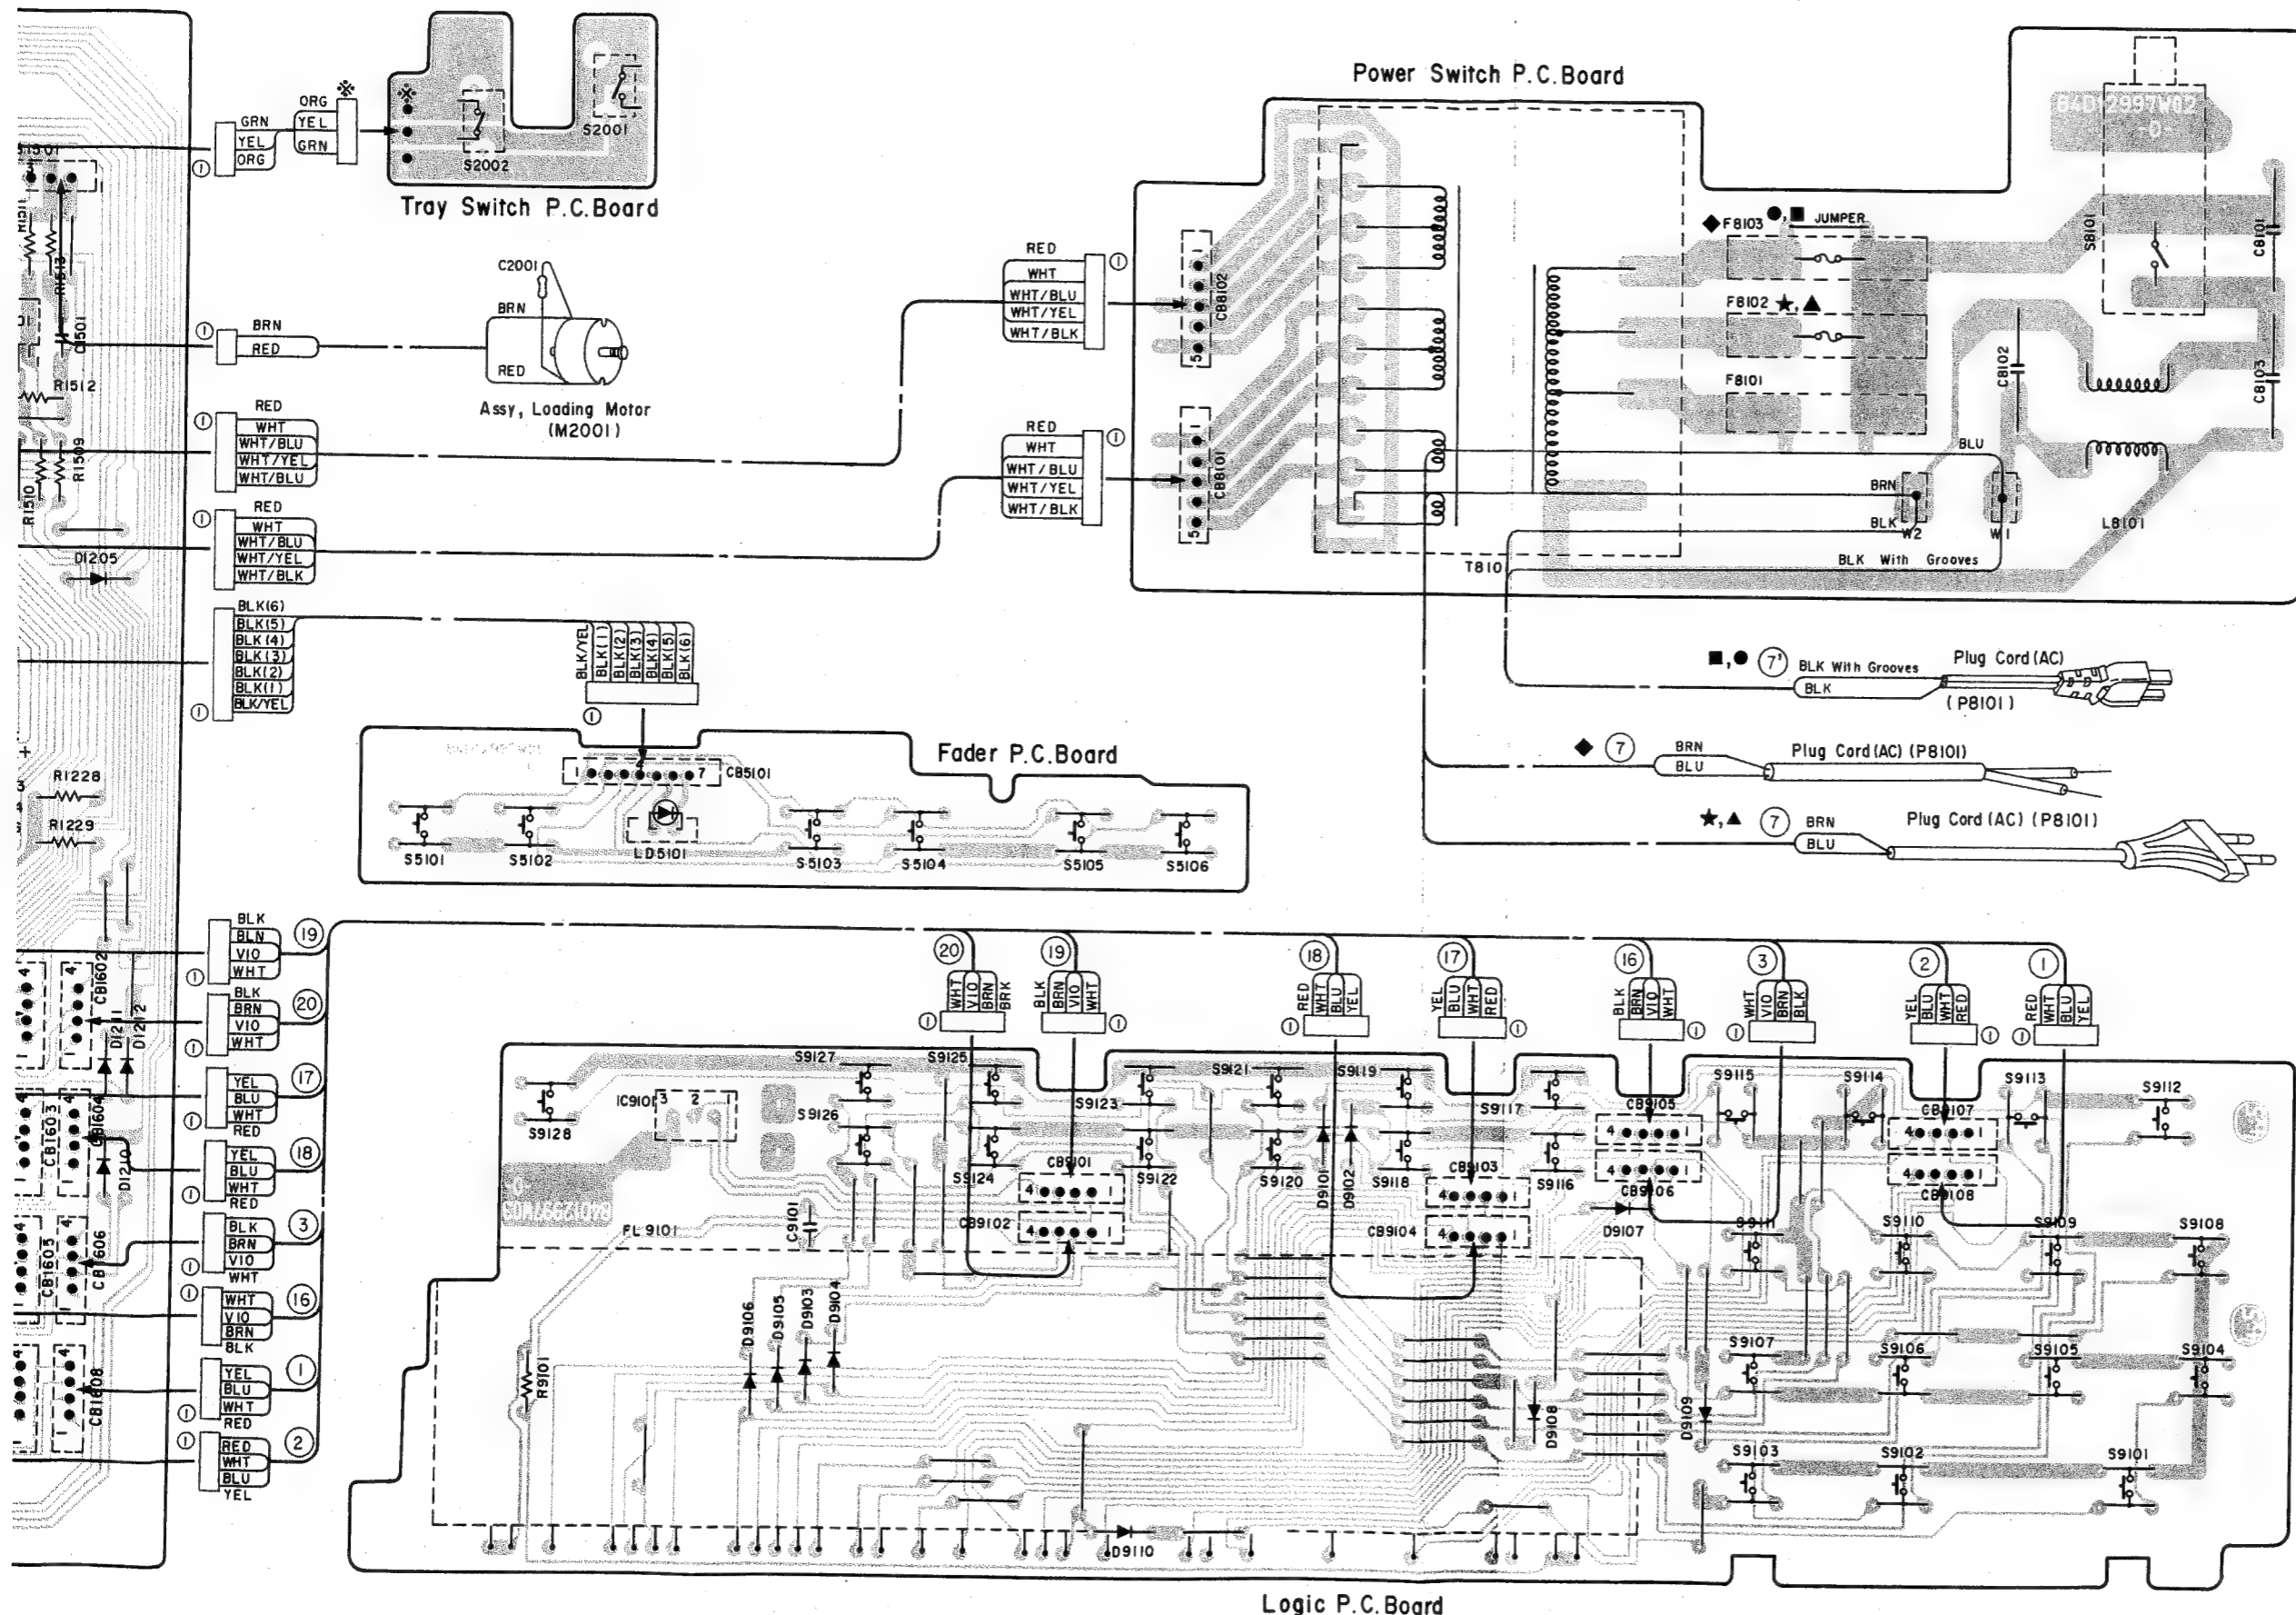

Note: ★: For General European models only (EK), ▲: For West German models only (AD)  
 ■: For North American models only (UK), ●: For Canadian models only (UQ)  
 ◆: For England models only (AG), Others: Common.

## 1



3

- 4

5

**B - 17 -**

**C**


D

# E

**F - 18 -**

**G**

## H

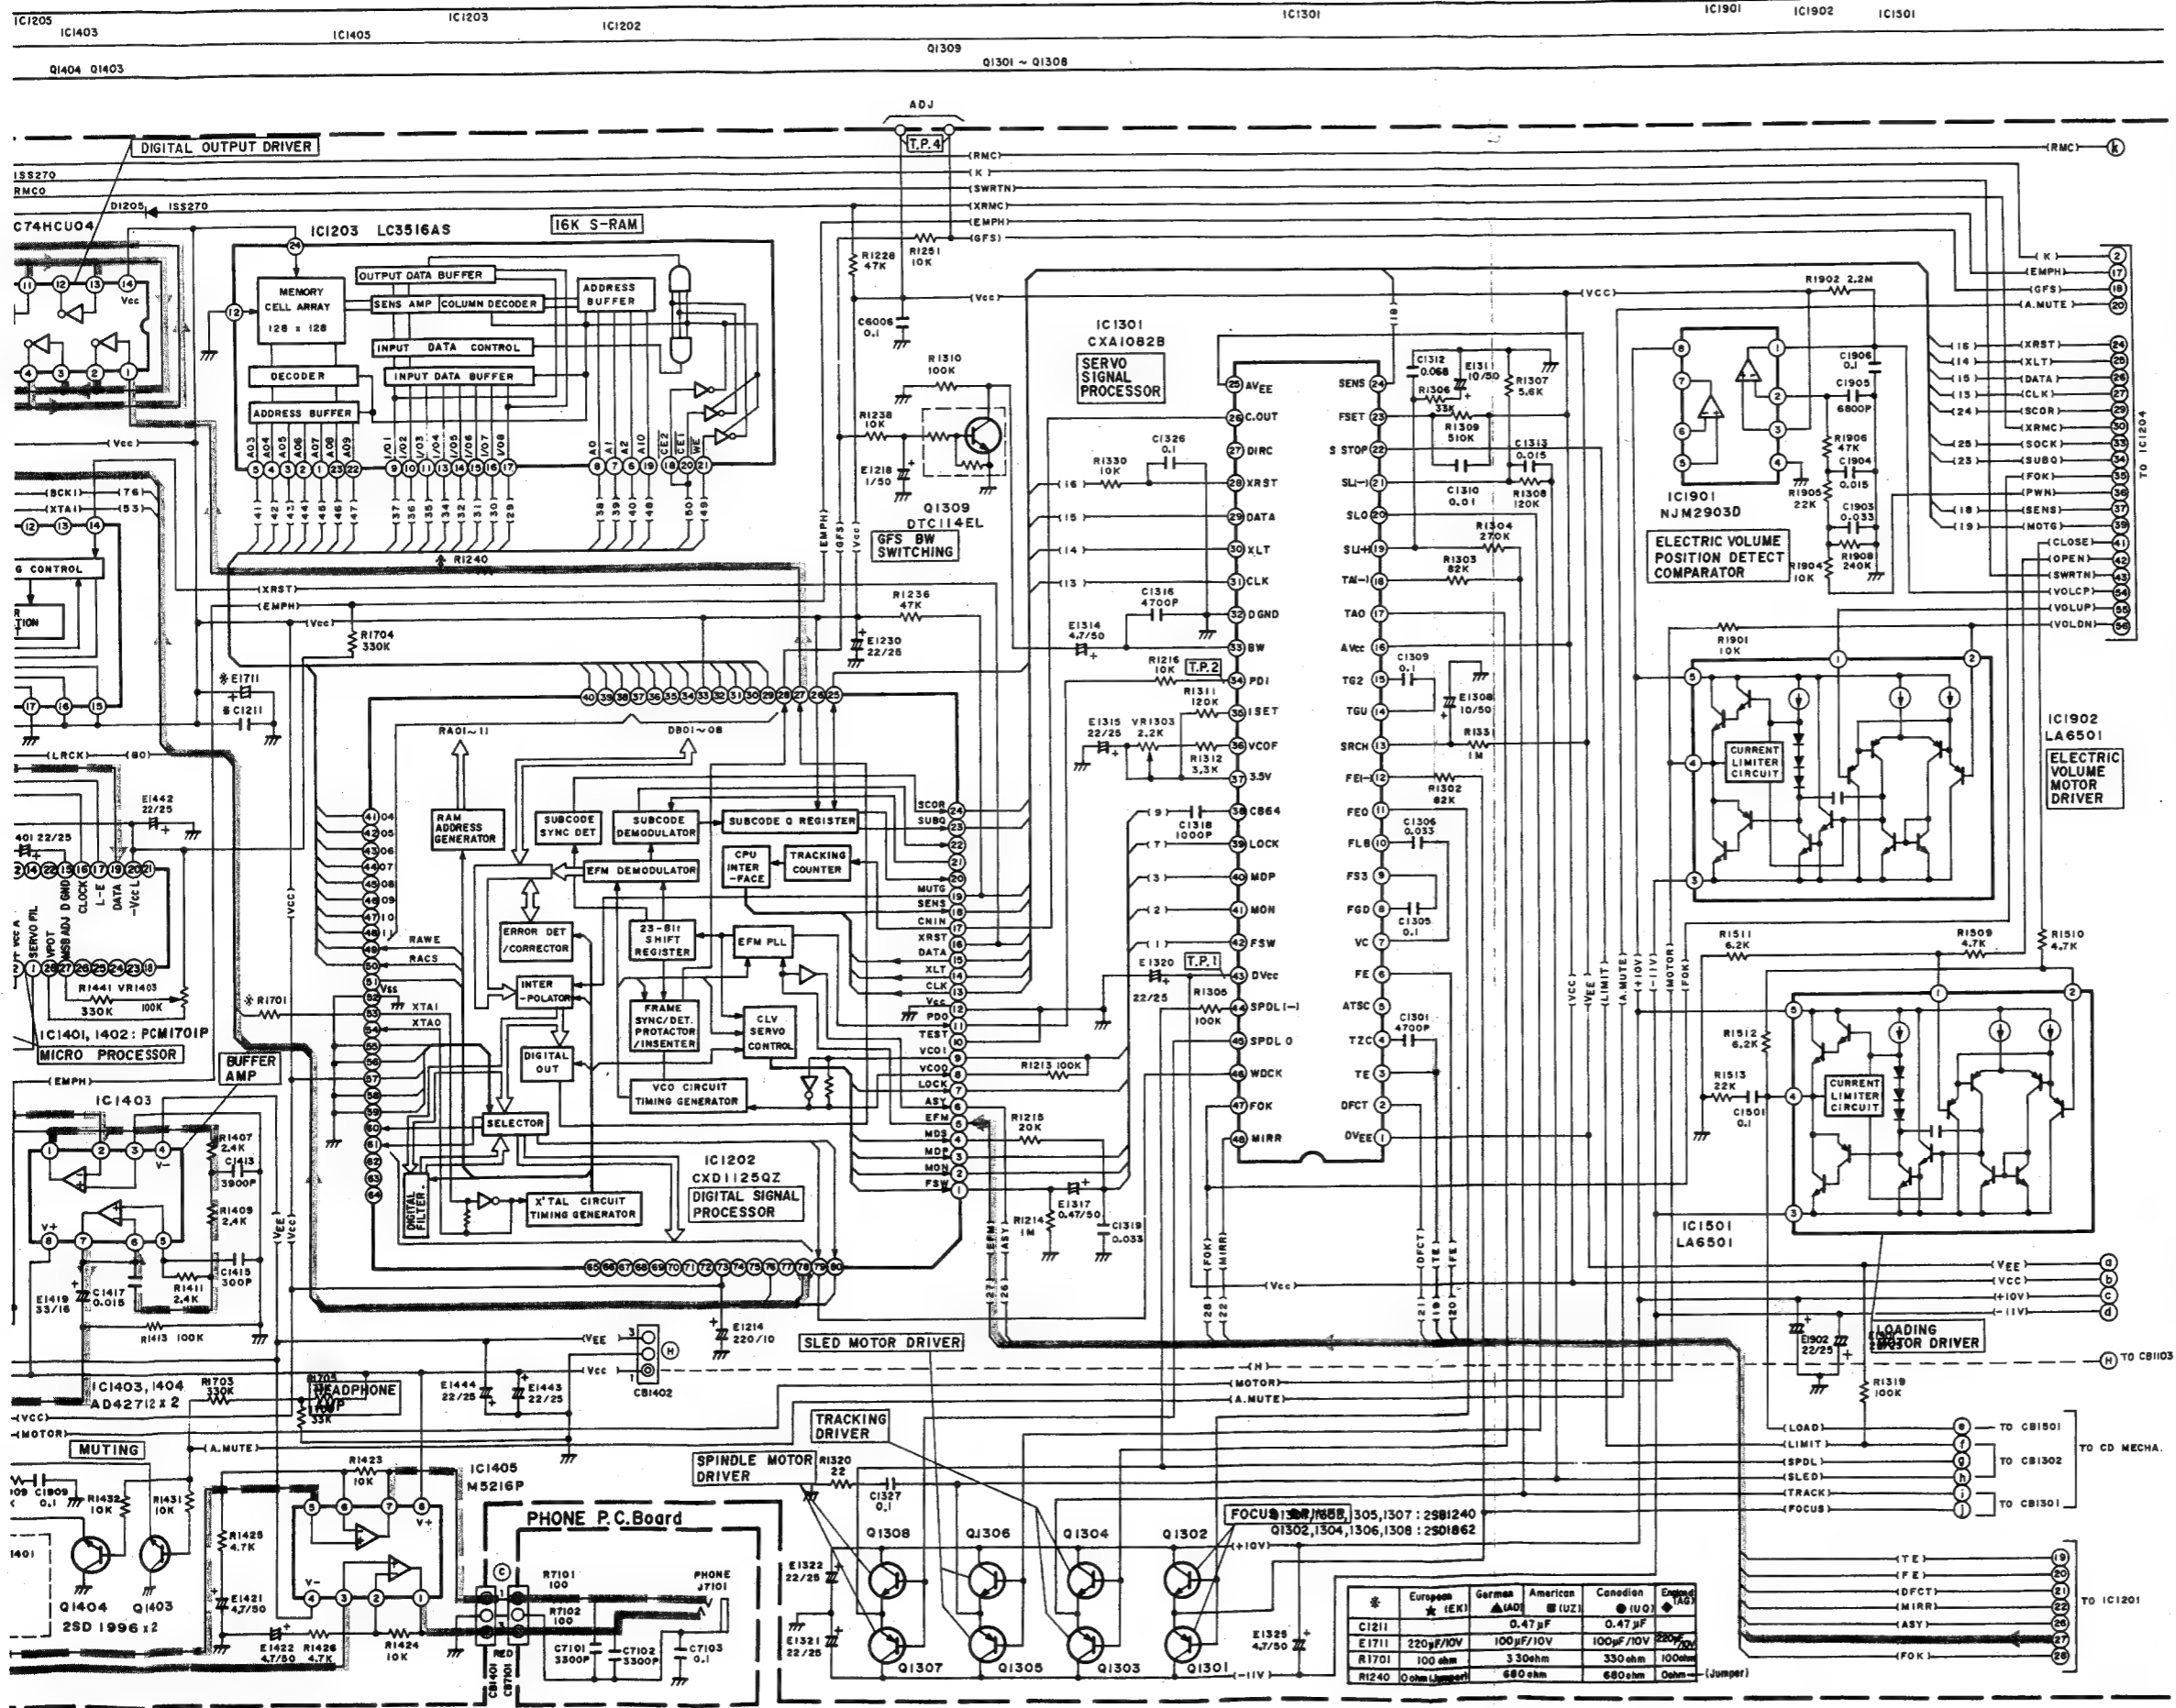

	E	C	B
Q1301	0.4V	-11V	0.9V
Q1302	0.4V	10.2V	0.9V
Q1303	0V	-11V	0V
Q1304	0V	10.2V	0V
Q1305		-11V	0V
Q1306		10.2V	0V
Q1307	0.5V	-11V	1V
Q1308	0.5V	10.2V	1V
Q1309	0V	0V	2.9V
Q1403	0V	0V	-5V
Q1404	0V	0V	-5V

	D	G	S
Q1401	0V	-1.2V	0V
Q1402	0V	-1.2V	0V

	1	15	5.1V
2	2.4V	16	5.1V
3	5.1V	17	0V
4	0V	18	
5		19	
6	2.5V	20	
7	2.5V	21	0V
8	0V	22	5.1V
9	22.5V	23	0.12V
10	5.1V	24	0.12V
11		25	3.7V
12		26	1.9V
13		27	
14	5.12V	28	2.5V

IC 1 2 0 2						IC 1 2 0 5					
1	0.1V	21		41	2.5V	61		1	2.5V		
2	5V	22		42	2.5V	62		2	2.5V		
3	2.6V	23	0.1V	43	2.5V	63		3	2.4V		
4	2.8V	24	0V	44	2.5V	64		4	2.5V		
5	2.5V	25	5V	45	2.5V	65		5	2.5V		
6	2.6V	26	5.1V	46		66		6	5.1V		
7	5.1V	27	2.4V	47		67		7	0V		
8	2.5V	28	5.1V	48		68		8	2.5V		
9	2.5V	29	0V	49	4.5V	69		9	2.5V		
10	0V	30	0V	50	2.7V	70		10	2.5V		
11	1.6V	31	0V	51	2.3V	71		11	2.5V		
12	0V	32	0V	52	0V	72		12	2.5V		
13	5.1V	33	5.1V	53	1.9V	73	5.1V	13	2.5V		
14	5.1V	34	0V	54		74		14	5.1V		
15	0V	35	0V	55	0V	75		15	0V		
16	5.1V	36	0V	56	0V	76		16	2.4V		
17	0.1V	37	0V	57	5.1V	77		17			
18	5.1V	38	2.5V	58	0V	78		18	0V		
19	0V	39	2.5V	59	0V	79		19	2.5V		
20		40	2.5V	60	2.5V	80		20	2.5V		

	1	0V
1	0V	
2	0V	
3	-11V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	

	1	0V
1	0V	
2	0V	
3	0V	
4	-14V	
5	0V	
6	0V	
7	0V	
8	12V	

	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	

	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	

	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	

	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	


	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	

	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	


	1	0V
1	0V	
2	0V	
3	0V	
4	0V	
5	0V	
6	0V	
7	0V	
8	12V	

[Measuring Conditions]  
 • Power Supply  
 : AC 240V, 50Hz (AG model only)  
 : AC 120/220/240V, 50Hz (AD/EX model only)  
 : AC 120V, 60Hz (UZ/UQ model only)  
 • Measuring Meter : Digital Multi Voltmeter  
 • Measuring Point Reference : Between Ground  
 • Measuring Condition : In Play Mode of CD Non-signal Track  
 (Test CD : SONY YDS-18 Track No. 7)

I C	IC1204				IC1104 IC1103		IC1201		IC1102 IC1101		IC9101
Transistor (Q)	Q1214	Q1213	Q1212	Q1211	Q1203	Q1104 Q1108	Q1103 Q1107	Q1102	Q1106 Q1105	Q1101	

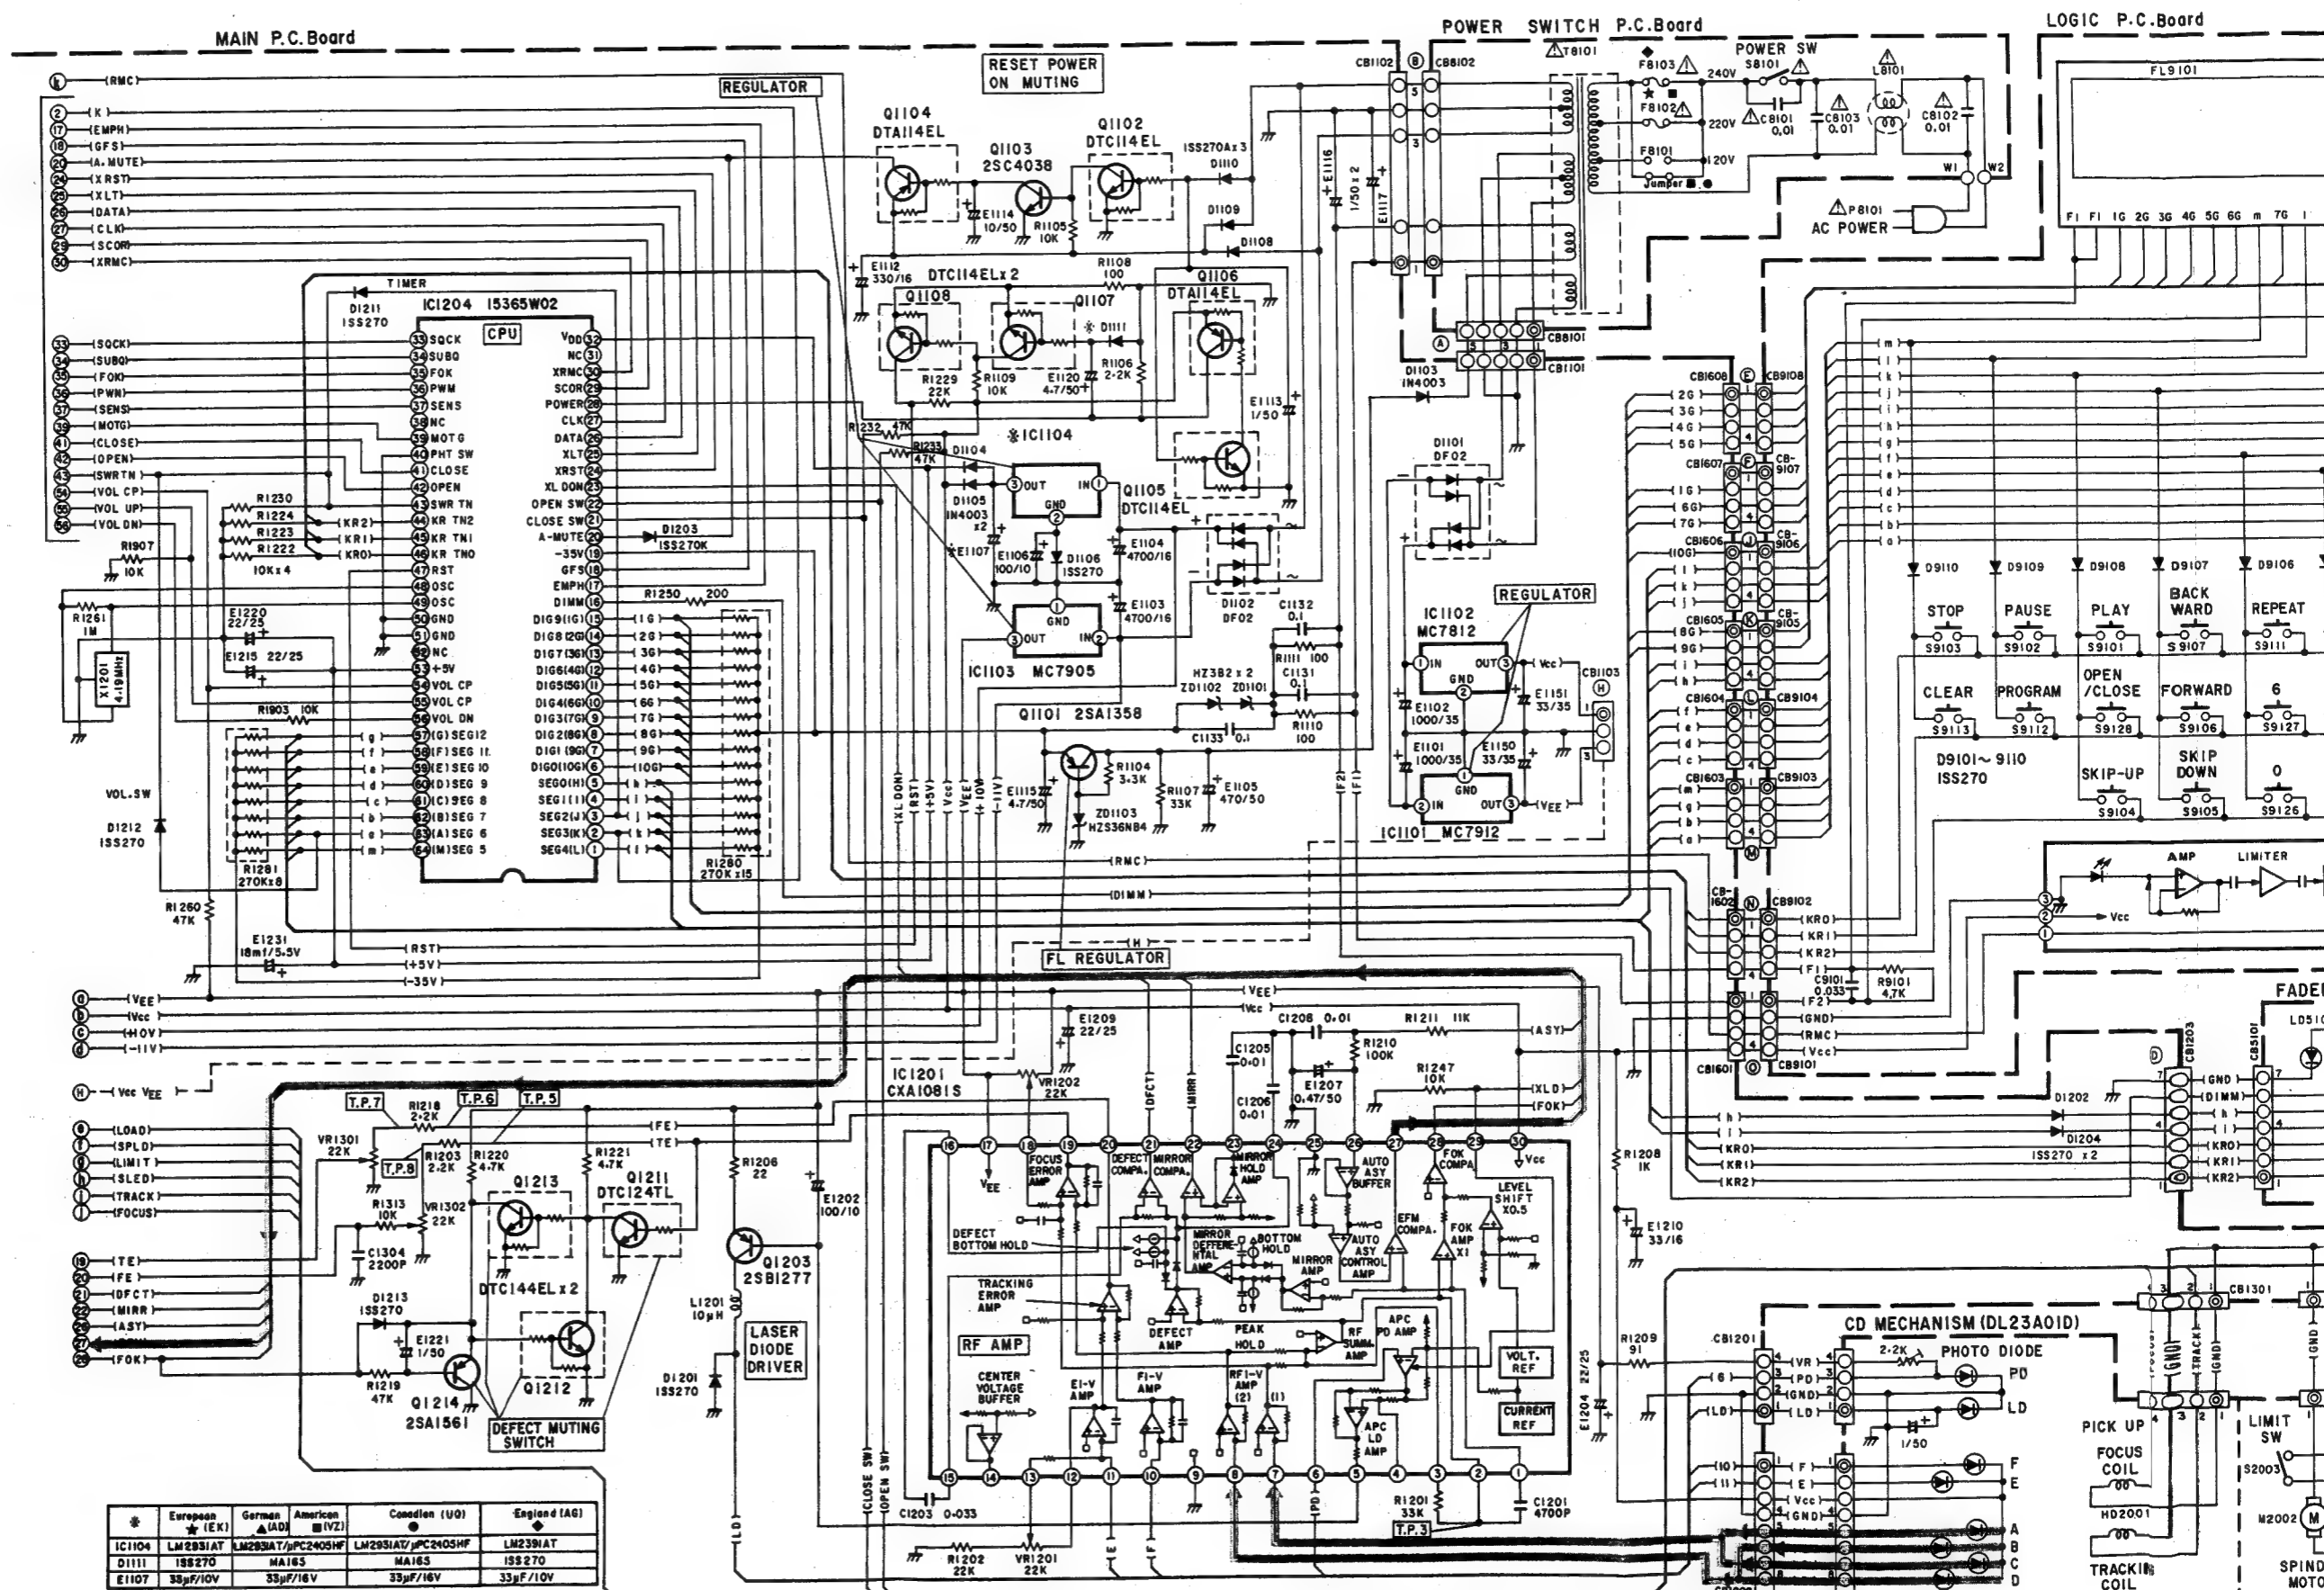

* ★ (EK)	German ▲ (AD)	American ■ (VZ)	Canadian (UO) ●	England (AG) ◆
IC1104	LM2931AT	LM2931AT/PC2405HF	LM2931AT/PC2405HF	LM2391AT
D1111	1S8270	MA165	MA165	1S8270
E1107	33 $\mu$ F/10V	33 $\mu$ F/16V	33 $\mu$ F/16V	33 $\mu$ F/10V

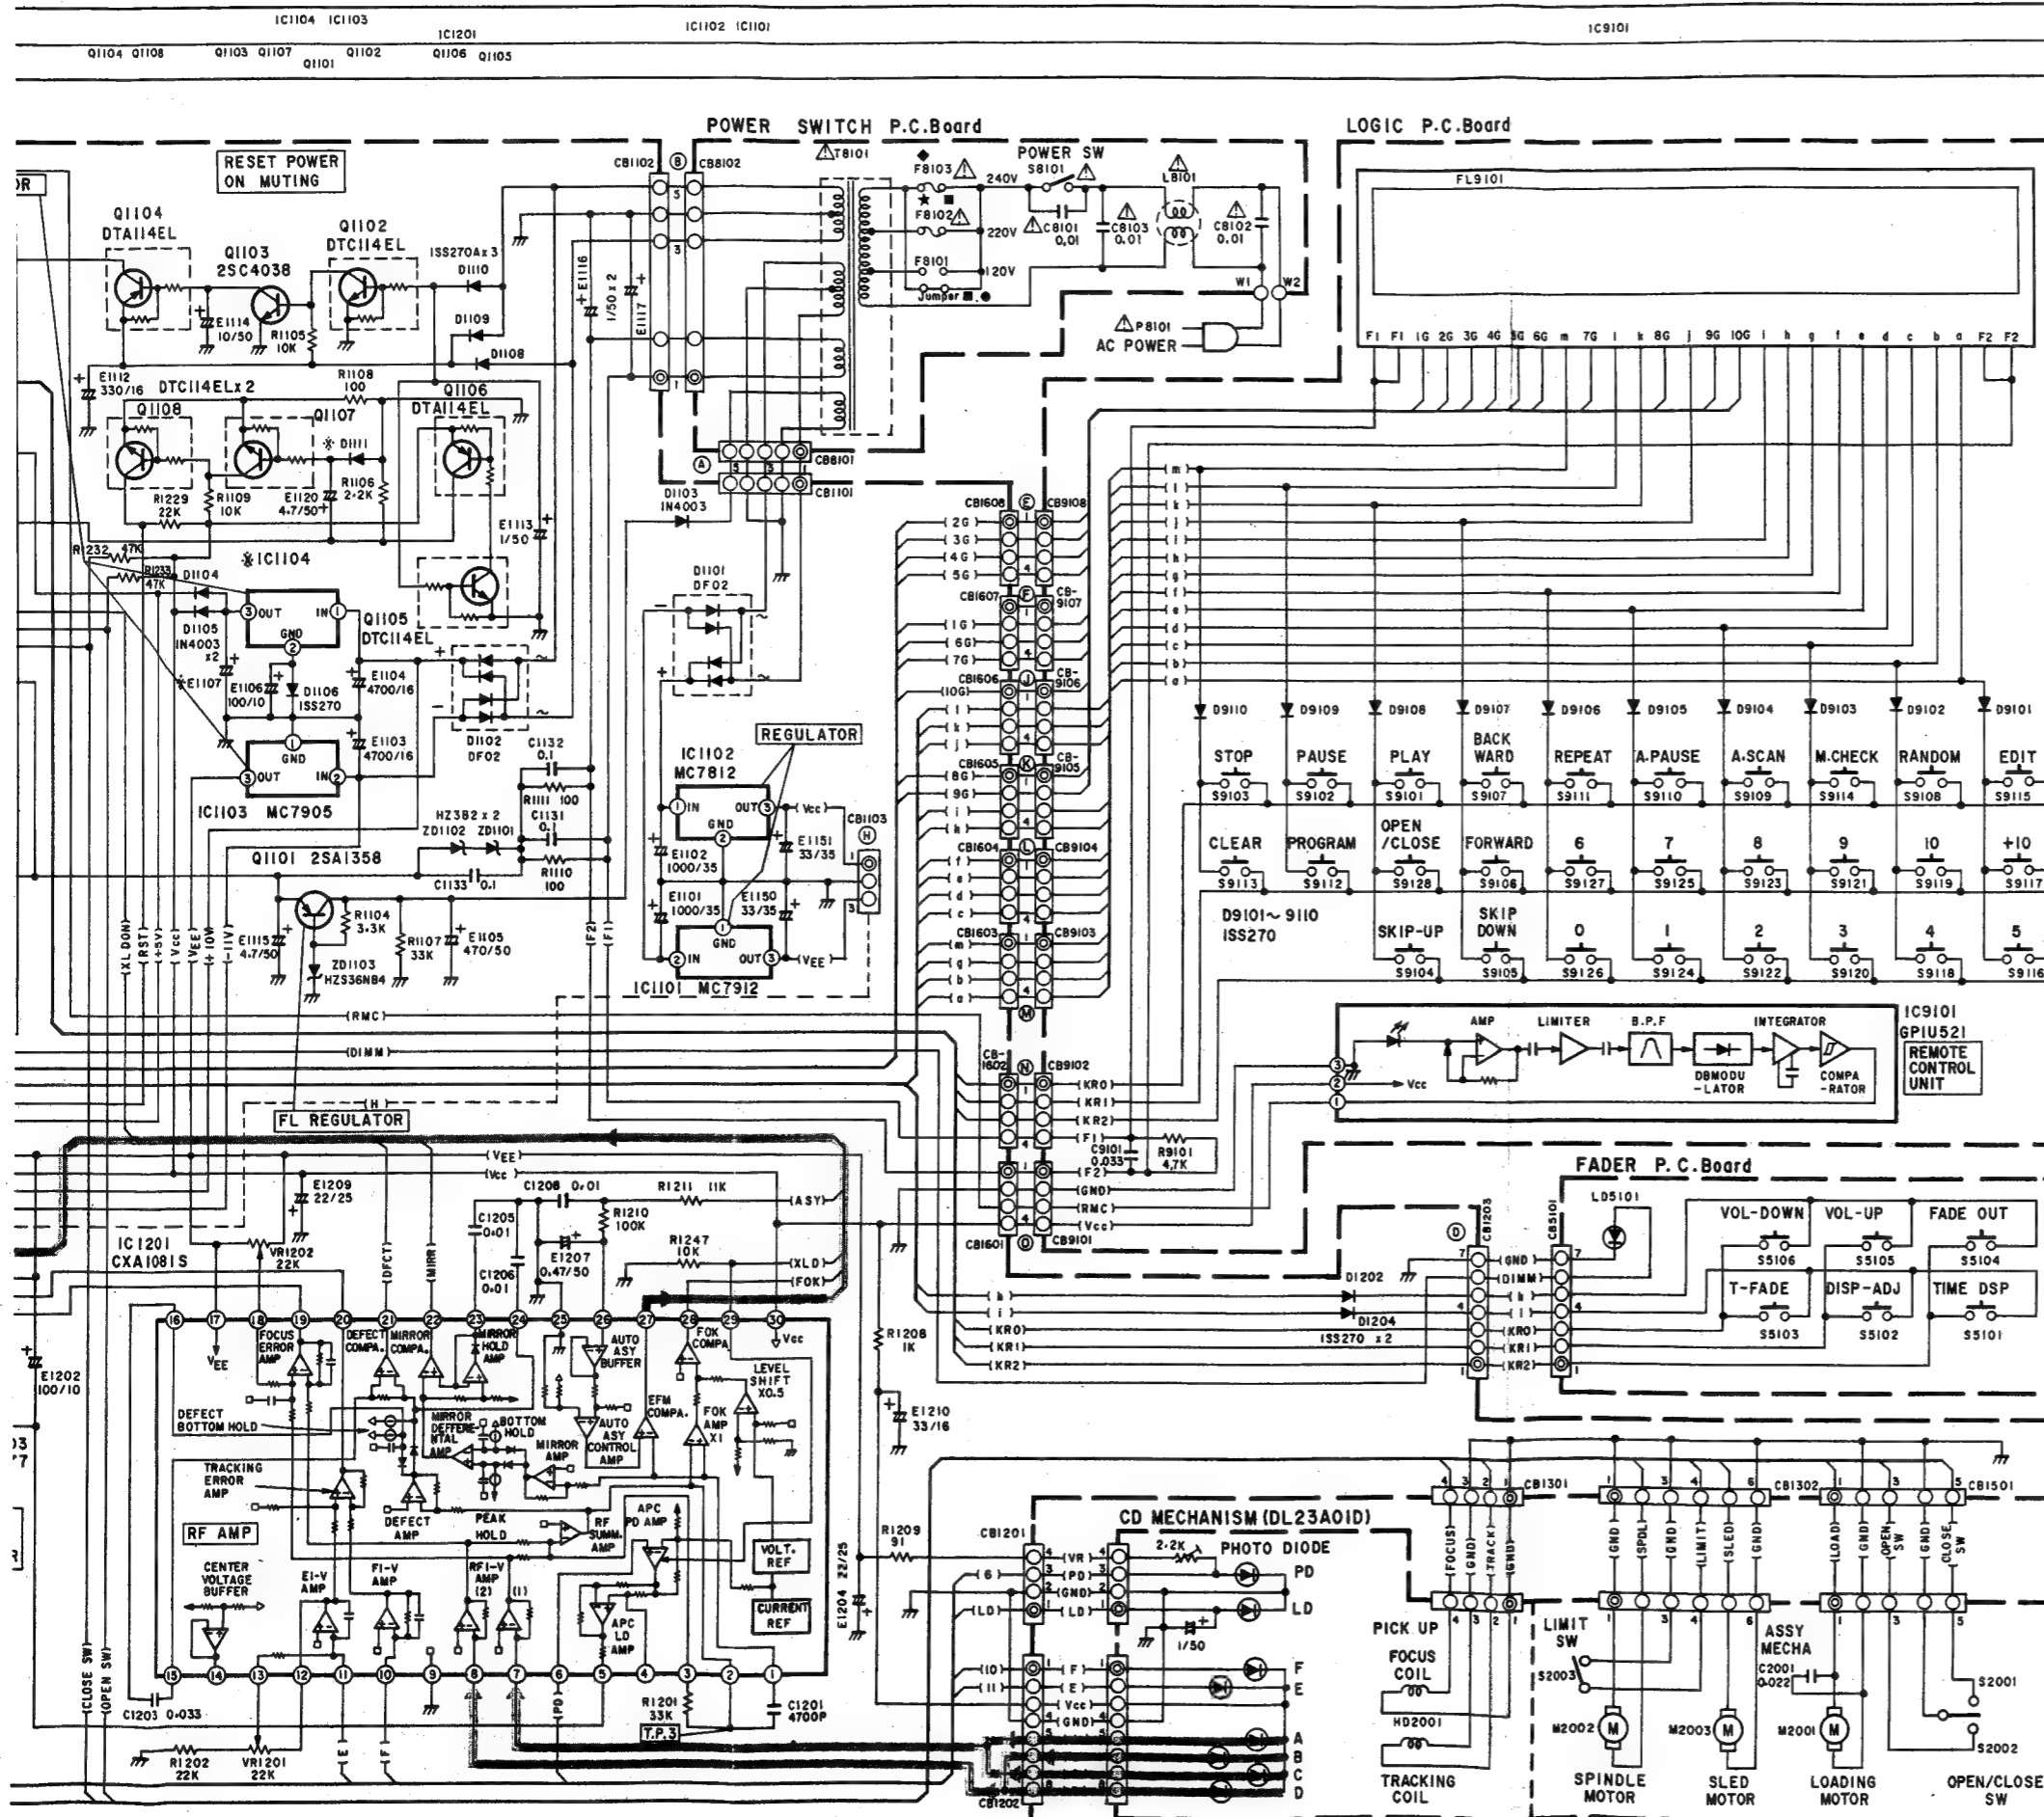

CAUTION :  
The  $\Delta$  mark, the symbol No. in the schematic diagram designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list.

	E	C	B
Q1101	-34.8V	43.1V	-35.4V
Q1102	0V	0.01V	5.9V
Q1103	0V	10.5V	0.01V
Q1104	0V	-5.9V	10.5V
Q1105	0V	0V	5.9V
Q1106	5V	0.03V	0V
Q1107	0.04V	2.9V	0.04V
Q1108	0.04V	0.04V	2.9V
Q1203	4V	1.8V	3.3V
Q1211	0V	0V	0.1V
Q1212	0V	0V	4.7V
Q1213	0V	4.7V	0V
Q1214	4.7V	0V	5V

IC1101	IC9101
1 0V	1 4.8V
2 -19.2V	2 5V
3 -12.2V	3 0V

IC1102
1 19.2V
2 0V
3 12V

IC1103
1 0.7V
2 -11.5V
3 -5V

IC1104
1 10.2V
2
3 5.88V

IC1201		
1	0V	16 -2.9V
2	1.3V	17 -5V
3	1.3V	18 0V
4	3.1V	19 0.1V
5	3.3V	20 0V
6	-4.8V	21 -4.3V
7	0V	22 0V
8	0V	23 -1.2V
9	0V	24 -2V
10	0V	25 0V
11	0V	26 2.6V
12	-1.1V	27 2.5V
13	-0.7V	28 5V
14	0.1V	29 0.4V
15	-3V	30 5.1V

IC 1204							
1	-28.1V	17	-11.9V	33	5V	49	2.35V
2	-22V	18	5V	34	1V	50	
3	-0.2V	19		35	0.03V	51	
4	-24V	20	-5.7V	36	0V	52	
5	1.8V	21	0V	37	5V	53	5.1V
6	-0.08V	22	5.1V	38		54	5V
7	-0.03V	23	0.4V	39	0V	55	0V
8	-0.08V	24	5.1V	40	0V	56	0V
9	-0.08V	25	5.1V	41	0V	57	-28.5V
10	-0.03V	26	0.03V	42	0V	58	-18.9V
11	-0.08V	27	5.1V	43	3.7V	59	-25V
12	-0.08V	28	5V	44	0V	60	-17V
13	-0.08V	29	0.03V	45	0V	61	
14	-0.08V	30	5V	46	0V	62	-13V
15	-0.08V	31		47	0.05V	63	-13V
16	0.01V	32	5.14V	48	2.35V	64	-29V

[Measuring Conditions]  
 • Power Supply  
 : AC 240V, 50Hz (AG model only)  
 : AC 120/220/240V, 50Hz (AD/EK model only)  
 : AC 120V, 60Hz (UZ/UQ model only)  
 • Measuring Meter : Digital Multi Voltmeter  
 • Measuring Point Reference : Between Ground  
 • Measuring Condition : In Play Mode of CD Non-signal Track  
 (Test CD : SONY YEDS-18 Track No. 7)

## NOTES:

- All resistance values are in ohms. K = 1,000
- All capacitance values are in microfarads. P =  $\frac{1}{1,000,000}$

# Electrical Parts List

Resistor : Carbon resistors under 1/4 watts are not mentioned in the parts list, please confirm them by schematic diagram.  
uF=microfarads, pF=picofarads

Abbreviations				
RES.=Resistor		CAP.=Capacitor		
C.F.=Carbon Film		ELY.=Electrolytic		
M.F.=Metal Film		CER.=Ceramic		
M.O.=Metal Oxide Film		MYL.=Mylar		
M.P.=Metal Plate		TAN.=Tantalum		
TR.=Transistor		POLY.=Polystyrol		
TRANS.=Transformer		PP.=Polypropylene		
CP.=Chip		PLT.=Polyethylene		
Symbol No.	Part No.	Description		
Main P. C. Board				
IC's				
	IC1101	51T94885F04	MC7912	
	IC1102	51T94884F04	MC7812	
	IC1103	51T94885F01	MC7905	
●	IC1104	51T16626W01	LM2931AT	
●	or	51T16168W02	μ PC2405HF	
◆	IC1104	51T16626W01	LM2931AT	
■	IC1104	51T16168W02	μ PC2405HF	
■	or	51T16626W01	LM2931AT	
▲	IC1104	51T16168W02	μ PC2405HF	
▲	or	51T16626W01	LM2931AT	
★	IC1104	51T16626W01	LM2931AT	
	IC1201	51T84721F01	CXA1081S	
	IC1202	51T84720F01	CXD1125QZ	
	or	51T84719F01	CXD1135QZ	
	IC1203	51T84723F01	LC3516AS	
	or	51T80623F02	CXK5816SP	
	IC1204	51T15365W02	15365W02	
	IC1205	51T94890F01	MC74HCU04	
	IC1301	51T84722F02	CXA1082BS	
	IC1401	51T16014W02	PCM1701P	
	IC1402	51T16014W02	PCM1701P	
	IC1403	51T15097W02	AD42712	
	IC1404	51T15097W02	AD42712	
	IC1405	51T81896F01	M5216P	
	IC1406	51T94884F01	MC7805	
	IC1501	51T90889F01	LA6501	
	IC1701	51T15628W01	SM5813AP	
	IC1901	51T64227F01	NJM2903D	
	IC1902	51T90889F01	LA6501	
Transistors				
	Q1101	48T69177F01	2SA1358	
	Q1102	48T82763F02	DTC114EL	
	Q1103	48T82758F01	2SC4038	
	Q1104	48T82762F02	DTA114EL	
	Q1105	48T82763F02	DTC114EL	

Symbol No.	Part No.	Description		
Q1106	48T82762F02	DTA114EL		
Q1107	48T82763F02	DTC114EL		
Q1108	48T82763F02	DTC114EL		
Q1203	48T82759F01	2SB1277		
Q1211	48T82763F11	DTC124TL		
Q1212	48T82763F04	DTC144EL		
Q1213	48T82763F04	DTC144EL		
Q1214	48T82757F01	2SA1561		
Q1301	48T84238F04	2SB1240		
Q1302	48T83834F04	2SD1862		
Q1303	48T84238F04	2SB1240		
Q1304	48T83834F04	2SD1862		
Q1305	48T84238F04	2SB1240		
Q1306	48T83834F04	2SD1862		
Q1307	48T84238F04	2SB1240		
Q1308	48T83834F04	2SD1862		
Q1309	48T82763F02	DTC114EL		
Q1401	48T66948F02	FET, 2SK246		
Q1402	48T66948F02	FET, 2SK246		
Q1403	48T90183F01	2SD1996		
Q1404	48T90183F01	2SD1996		
Diodes				
D1101	48T15662W01	DF02		
D1102	48T15662W01	DF02		
D1103	48S40477U01	IN4003		
D1104	48S40477U01	IN4003		
D1105	48S40477U01	IN4003		
D1106	48T84758F01	1SS270		
or	48T58583F01	1SS176		
D1108	48T84758F01	1SS270		
or	48T58583F01	1SS176		
D1109	48T84758F01	1SS270		
or	48T58583F01	1SS176		
D1110	48T84758F01	1SS270		
or	48T58583F01	1SS176		
★ D1111	48T84758F01	1SS270		
■ D1111	48T44813F02	MA165		
▲ D1111	48T44813F02	MA165		
◆ D1111	48T84758F01	1SS270		
● D1111	48T44813F02	MA165		
D1201	48T84758F01	1SS270		
or	48T58583F01	1SS176		
D1202	48T84758F01	1SS270		
or	48T58583F01	1SS176		

Note : ★ : For General European model only (EK), ▲ : For West German model only (AD),  
■ : For North American model only (UZ), ● : For Canadian model only (UQ),  
◆ : For England model only (AG), Others : Common.

Symbol No.	Part No.	Description			Symbol No.	Part No.	Description		
D1203 or D1204 or D1205 or	48T84758F01 48T58583F01 48T84758F01 48T58583F01 48T84758F01 48T58583F01	1SS270 1SS176 1SS270 1SS176 1SS270 1SS176			★ E1107 ■ E1107 ● E1107 ▲ E1107 ◆ E1107	23T00149L11 23T00181L17 23T00181L17 23T00181L17 23T00149L11	ELY., 33 $\mu$ F/10V ELY., 33 $\mu$ F/16V ELY., 33 $\mu$ F/16V ELY., 33 $\mu$ F/16V ELY., 33 $\mu$ F/10V		
D1210 or D1211 or D1212 or	48T84758F01 48T58583F01 48T84758F01 48T58583F01 48T84758F01 48T58583F01	1SS270 1SS176 1SS270 1SS176 1SS270 1SS176			E1112 E1113 E1114 E1115 E1116	23T00181L19 23T00180L21 23T00180L25 23T00180L24 23T00180L21	ELY., 330 $\mu$ F/16V ELY., 1 $\mu$ F/50V ELY., 10 $\mu$ F/50V ELY., 4.7 $\mu$ F/50V ELY., 1 $\mu$ F/50V		
D1213 or ZD1101 ZD1102 ZD1103	48T84758F01 48T58583F01 48T52739F11 48T52739F11 48T90517F91	1SS270 1SS176 Zener, HZ3B-2 Zener, HZ3B-2 Zener, HZS36NB4			E1117 ★ E1120 ◆ E1120 ■ E1120 ▲ E1120  ● E1120 C1131 C1132 C1133 E1150	23T00180L21 23T00180L24 23T00180L24 23T00181L43 23T00181L43  23T00181L43 08T57298F01 08T57298F01 08T57298F01 23T00180L17	ELY., 1 $\mu$ F/50V ELY., 4.7 $\mu$ F/50V ELY., 4.7 $\mu$ F/50V ELY., 4.7 $\mu$ F/50V ELY., 4.7 $\mu$ F/50V  ELY., 4.7 $\mu$ F/50V CER., 0.1 $\mu$ F CER., 0.1 $\mu$ F CER., 0.1 $\mu$ F ELY., 33 $\mu$ F/35V		
Coil/Transformer/Crystals					E1151 C1201 E1202 C1203 E1204	23T00180L17 08T57705F63 23T00180L04 08T57705F73 23T00180L12	ELY., 33 $\mu$ F/35V MYL., 4700pF ELY., 100 $\mu$ F/10V MYL., 0.033 $\mu$ F ELY., 22 $\mu$ F/25V		
L1201  T6001 X1201  X1701	24T50508F22  25T94882F01 91T15285W01  48T84727F02	Coil, Inductor, 10 $\mu$ H Trans, Puls CER., LOCK 4.19MHz Crystal, AT-51 16.9344MHz			C1205 C1206 E1207 C1208 E1209	08T57705F67 08T57705F67 23T00180L20 08T57705F67 23T00180L12	MYL., 0.01 $\mu$ F MYL., 0.01 $\mu$ F ELY., 0.47 $\mu$ F/50V MYL., 0.01 $\mu$ F ELY., 22 $\mu$ F/25V		
Jacks					E1210 ● C1211 ■ C1211 ▲ C1211 ★ E1214	23T00180L08 08T94422F01 08T94422F01 08T94422F01 23T00138L13	ELY., 33 $\mu$ F/16V CER., 0.47 $\mu$ F CER., 0.47 $\mu$ F CER., 0.47 $\mu$ F ELY., 220 $\mu$ F/10V		
J1201  J1401  J1402  J6001  J7101	09T84124F01  09T15974W03  09T15974W03  09T15627W02  09T74077F02	Jack, Headphone Mini W (S1201) (Serial Remote) Jack, T6302 (Analog Out) Jack, T6302 (Analog Out) Jack, T6314 ORG NI (Digital Out) Jack, Phones (Phones)			■ E1214 ▲ E1214 ● E1214 ◆ E1214 E1215	23T00180L05 23T00180L05 23T00180L05 23T00138L13 23T00180L12	ELY., 220 $\mu$ F/10V ELY., 220 $\mu$ F/10V ELY., 220 $\mu$ F/10V ELY., 220 $\mu$ F/10V ELY., 22 $\mu$ F/25V		
Capacitors					E1218 E1220 E1221 E1230 E1231	23T00180L21 23T00180L12 23T00180L21 23T00180L12 23T74513F06	ELY., 1 $\mu$ F/50V ELY., 22 $\mu$ F/25V ELY., 1 $\mu$ F/50V ELY., 22 $\mu$ F/25V ELY., 18mF/5.5V		
E1101 E1102 E1103 E1104 E1105	23T00181L37 23T00181L37 23T00181L24 23T00181L24 23T00136L71	ELY., 1000 $\mu$ F/35V ELY., 1000 $\mu$ F/35V ELY., 4700 $\mu$ F/16V ELY., 4700 $\mu$ F/16V ELY., 470 $\mu$ F/50V			C1301 C1304 C1305 C1306 E1308	08T57705F63 08T57705F59 08T57705F79 08T57705F73 23T00180L25	MYL., 4700pF MYL., 2200pF MYL., 0.1 $\mu$ F MYL., 0.033 $\mu$ F ELY., 10 $\mu$ F/50V		
◆ E1106 ● E1106 ★ E1106 ■ E1106 ▲ E1106	23T00149L13 23T00181L09 23T00149L13 23T00181L09 23T00181L09	ELY., 100 $\mu$ F/10V ELY., 100 $\mu$ F/10V ELY., 100 $\mu$ F/10V ELY., 100 $\mu$ F/10V ELY., 100 $\mu$ F/10V							

Note: ★: For General European model only (EK), ▲: For West German model only (AD),  
 ■: For North American model only (UZ), ●: For Canadian model only (UQ),  
 ◆: For England model only (AG), Others: Common.

Symbol No.	Part No.	Description			Symbol No.	Part No.	Description		
C1309	08T57705F79	MYL., 0.1 $\mu$ F			C1604	08T57298F01	CER., 0.1 $\mu$ F		
C1310	08T57705F67	MYL., 0.01 $\mu$ F			C1606	08T40794F50	CER., 1000pF		
E1311	23T00180L25	ELY., 10 $\mu$ F/50V			C1701	08T55260F13	CER., 10pF		
C1312	08T57705F77	MYL., 0.068 $\mu$ F			C1702	08T55260F13	CER., 10pF		
C1313	08T57705F69	MYL., 0.015 $\mu$ F			● E1711	23T00180L04	ELY., 100 $\mu$ F/10V		
E1314	23T00180L24	ELY., 4.7 $\mu$ F/50V			★ E1711	23T00138L13	ELY., 220 $\mu$ F/10V		
E1315	23T00180L12	ELY., 22 $\mu$ F/25V			■ E1711	23T00180L04	ELY., 100 $\mu$ F/10V		
C1316	08T57705F63	MYL., 4700pF			▲ E1711	23T00180L04	ELY., 100 $\mu$ F/10V		
E1317	23T00180L20	ELY., 0.47 $\mu$ F/50V			◆ E1711	23T00138L13	ELY., 220 $\mu$ F/10V		
C1318	08T57705F55	MYL., 1000pF			E1901	23T00180L12	ELY., 22 $\mu$ F/25V		
C1319	08T57705F73	MYL., 0.033 $\mu$ F			E1902	23T00180L12	ELY., 22 $\mu$ F/25V		
E1320	23T00180L12	ELY., 22 $\mu$ F/25V			C1903	08T57705F73	MYL., 0.033 $\mu$ F		
E1321	23T00180L12	ELY., 22 $\mu$ F/25V			C1904	08T57705F69	MYL., 0.015 $\mu$ F		
E1322	23T00180L12	ELY., 22 $\mu$ F/25V			C1905	08T57705F65	MYL., 6800pF		
E1325	23T00180L24	ELY., 4.7 $\mu$ F/50V			C1906	08T57298F01	CER., 0.1 $\mu$ F		
C1326	08T57298F01	CER., 0.1 $\mu$ F			◆ C1909	08T42629F79	MYL., 0.1 $\mu$ F		
C1327	08T57705F79	MYL., 0.1 $\mu$ F			★ C1909	08T42629F79	MYL., 0.1 $\mu$ F		
E1401	23T00180L12	ELY., 22 $\mu$ F/25V			● C1909	08S65480F63	CER., 0.1 $\mu$ F		
E1402	23T00180L12	ELY., 22 $\mu$ F/25V			■ C1909	08S65480F63	CER., 0.1 $\mu$ F		
E1403	23T00180L12	ELY., 22 $\mu$ F/25V			▲ C1909	08S65480F63	CER., 0.1 $\mu$ F		
E1404	23T00180L12	ELY., 22 $\mu$ F/25V			E1910	23T00180L12	ELY., 22 $\mu$ F/25V		
E1405	23T00180L12	ELY., 22 $\mu$ F/25V			E6002	23T00180L12	ELY., 22 $\mu$ F/25V		
E1406	23T00180L12	ELY., 22 $\mu$ F/25V			C6003	08T57298F01	CER., 0.1 $\mu$ F		
E1407	23T00180L12	ELY., 22 $\mu$ F/25V			C6004	08T57298F01	CER., 0.1 $\mu$ F		
E1408	23T00180L12	ELY., 22 $\mu$ F/25V			C6006	08T57298F01	CER., 0.1 $\mu$ F		
C1409	08T93406F51	PP., 0.012 $\mu$ F			Resistors				
C1410	08T93406F51	PP., 0.012 $\mu$ F			R1280	06T74182F09	Block, 270k ohm $\times$ 5		
C1411	08T00152L08	PP., 820pF			R1281	06T74182F08	Block, 270k ohm $\times$ 8		
C1412	08T00152L08	PP., 820pF			R1490	06T92263F37	MF., 330 ohm 1W		
C1413	08T00152L16	PP., 3900pF			VR1201	18T15356W15	Variable, RH0634C 22k ohm		
C1414	08T00152L16	PP., 3900pF			VR1202	18T15356W15	Variable, RH0634C 22k ohm		
C1415	08T93406F12	PP., 300pF			VR1301	18T15356W15	Variable, RH0634C 22k ohm		
C1416	08T93406F12	PP., 300pF			VR1302	18T15356W15	Variable, RH0634C 22k ohm		
C1417	08T93406F53	PP., 0.015 $\mu$ F			VR1303	18T15356W09	Variable, RH0634C 2.2k ohm		
C1418	08T93406F53	PP., 0.015 $\mu$ F			VR1401	18T10803W03	Variable, RK16313MA (10K) (M1401)		
E1419	23T00180L08	ELY., 33 $\mu$ F/16V			VR1403	18T15356W19	Variable, RH0634C 100k ohm		
E1420	23T00180L08	ELY., 33 $\mu$ F/16V			VR1404	18T15356W19	Variable, RH0634C 100k ohm		
C1421	08T57705F55	MYL., 1000pF							
E1421	23T00180L24	ELY., 4.7 $\mu$ F/50V							
C1422	08T57705F55	MYL., 1000pF							
E1422	23T00180L24	ELY., 4.7 $\mu$ F/50V							
C1423	08T57705F55	MYL., 1000pF							
C1424	08T57705F55	MYL., 1000pF							
E1441	23T00180L12	ELY., 22 $\mu$ F/25V							
E1442	23T00180L12	ELY., 22 $\mu$ F/25V							
E1443	23T00180L12	ELY., 22 $\mu$ F/25V							
E1444	23T00180L12	ELY., 22 $\mu$ F/25V							
C1501	08T57705F79	MYL., 0.1 $\mu$ F							
C1601	08T57298F01	CER., 0.1 $\mu$ F							
C1603	08T57298F01	CER., 0.1 $\mu$ F							

Note : ★ : For General European model only (EK), ▲ : For West German model only (AD),  
 ■ : For North American model only (UZ), ● : For Canadian model only (UQ),  
 ◆ : For England model only (AG), Others : Common.

Symbol No.	Part No.	Description			
Fader P. C. Board					
LED					
LD5101	48T66616F02	SLR-54VR3 (RED)			
Switches					
S5101	40T83324F11	Tact SKHHAP (TIME DSP)			
S5102	40T83324F11	Tact SKHHAP (DISP-ADJ)			
S5103	40T83324F11	Tact SKHHAP (T-FADE)			
S5104	40T83324F11	Tact SKHHAP (FADE-OUT)			
S5105	40T83324F11	Tact SKHHAP (VOL-UP)			
S5106	40T83324F11	Tact SKHHAP (VOL-DOWN)			
Photo P. C. Board					
Capacitors					
C7101	08T57705F61	MYL., 3300pF			
C7102	08T57705F61	MYL., 3300pF			
C7103	08T57298F01	CER., 0.1 $\mu$ F			
Power Switch P. C. Board					
Coils/Switch					
★ L8101	24T15610W01	Coil, PLA6003R3A			
■ L8101	24T16397W01	Filter, Line SU10V-20006			
▲ L8101	24T16397W01	Filter, Line SU10V-20006			
● L8101	24T16397W01	Filter, Line SU10V-20006			
◆ L8101	24T15610W01	Coil, RLA6003R3A			
S8101	40T84122F01	Switch, Power SDDLE (Power Switch)			
Capacitors					
■ C8101	08T00195L01	POLY., 0.01 $\mu$ F			
★ C8101	08T00195L01	POLY., 0.01 $\mu$ F			
▲ C8101	08T00196L01	POLY., 0.01 $\mu$ F			
● C8101	08T00195L01	POLY., 0.01 $\mu$ F			
◆ C8101	08T00195L01	POLY., 0.01 $\mu$ F			

Symbol No.	Part No.	Description			
■ C8102	08T00195L01	POLY., 0.01 $\mu$ F			
▲ C8102	08T00196L01	POLY., 0.01 $\mu$ F			
● C8102	08T00195L01	POLY., 0.01 $\mu$ F			
★ C8102	08T00196L01	POLY., 0.01 $\mu$ F			
◆ C8102	08T00196L01	POLY., 0.01 $\mu$ F			
■ C8103	08T00195L01	POLY., 0.01 $\mu$ F			
▲ C8103	08T00196L01	POLY., 0.01 $\mu$ F			
★ C8103	08T00196L01	POLY., 0.01 $\mu$ F			
● C8103	08T00195L01	POLY., 0.01 $\mu$ F			
◆ C8103	08T00196L01	POLY., 0.01 $\mu$ F			
Logic P. C. Board					
IC's					
IC9101 or	51T16094W01 51T16094W02	GP1U521 GP1U521X			
Diodes					
D9101 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9102 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9103 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9104 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9105 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9106 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9107 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9108 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9109 or	48T84758F01 48T58583F01	1SS270 1SS176			
D9110 or	48T84758F01 48T58583F01	1SS270 1SS176			
Switches					
S9101	40T83324F11	Tact SKHHAP (PLAY)			
S9102	40T83324F11	Tact SKHHAP (PAUSE)			
S9103	40T83324F11	Tact SKHHAP (STOP)			
S9104	40T83324F11	Tact SKHHAP (SKIP-UP)			
S9105	40T83324F11	Tact SKHHAP (SKIP-DOWN)			

Note: ★: For General European model only (EK), ▲: For West German model only (AD),  
 ■: For North American model only (UZ), ●: For Canadian model only (UQ),  
 ◆: For England model only (AG), Others: Common.

Symbol No.	Part No.	Description			Symbol No.	Part No.	Description		
S9106	40T83324F11	Tact SKHHAP (FORWARD)			M2001	01V11200W42	Assy., Loading Motor		
S9107	40T83324F11	Tact SKHHAP (BACKWARD)			M2002	59T81431F01	Spindle Motor		
S9108	40T83324F06	Tact SKHHAN (RANDOM)			M2003	01V94700F74	Assy., Slider Motor		
S9109	40T83324F06	Tact SKHHAN (A-SCAN)			★ P8101	28T43812P04	Plug, Cord		
S9110	40T83324F06	Tact SKHHAN (A-PAUSE)			▲ P8101	28T43812F04	Plug, Cord		
S9111	40T83324F06	Tact SKHHAN (REPEAT)			◆ P8101	28T44061F05	Plug, Cord		
S9112	40T83324F11	Tact SKHHAP (PROGRAM)			■ P8101	28T55335F02	Plug, Cord		
S9113	40T83324F11	Tact SKHHAP (CLEAR)			● P8101	28T55335F02	Plug, Cord		
S9114	40T83324F11	Tact SKHHAP (M-CHECK)			S2001	40T71025F01	Switch, Detector (IN/OUT)		
S9115	40T83324F11	Tact SKHHAP (EDIT)			S2002	40T71025F01	Switch, Detector (IN/OUT)		
S9116	40T83324F11	Tact SKHHAP (M5)			S2003	40T71025F01	Switch, Detector (Limit)		
S9117	40T83324F11	Tact SKHHAP (+10)			★ T8101	25T16148W01	Trans, Power		
S9118	40T83324F11	Tact SKHHAP (M4)			▲ T8101	25T16148W01	Trans, Power		
S9119	40T83324F11	Tact SKHHAP (M10)			■ T8101	25T16148W01	Trans, Power		
S9120	40T83324F11	Tact SKHHAP (M3)			● T8101	25T16147W01	Trans, Power		
S9121	40T83324F11	Tact SKHHAP (M9)			◆ T8101	25T16148W01	Trans, Power		
S9122	40T83324F11	Tact SKHHAP (M2)							
S9123	40T83324F11	Tact SKHHAP (M8)							
S9124	40T83324F11	Tact SKHHAP (M1)							
S9125	40T83324F11	Tact SKHHAP (M7)							
S9126	40T83324F11	Tact SKHHAP (M0)							
S9127	40T83324F11	Tact SKHHAP (M6)							
S9128	40T83324F11	Tact SKHHAP (OPEN/CLOSE)							
Capacitor									
C9101	08T57705F73	MYL., 0.033 $\mu$ F							
Miscellaneous									
★ C2001	08S40154T63	CAP., CER., 0.022 $\mu$ F							
★ F8102	65T42077U11	Fuse, Semko (315mA)							
▲ F8102	65T42077U11	Fuse, Semko (315mA)							
◆ F8103	65T42077U11	Fuse, Semko (315mA)							
FL9101	65T15386W01	Display, FL							
HD2001	88T81528F01	Head, Optical Pick Up							

Note : ★ : For General European model only (EK), ▲ : For West German model only (AD),  
 ■ : For North American model only (UZ), ● : For Canadian model only (UQ),  
 ◆ : For England model only (AG), Others : Common.

# Cabinet Assembly Parts List

NOTE: The parts without part numbers are not supplied.

Symbol No.	Index	Part No.	Description			Symbol No.	Index	Part No.	Description		
	1	4-A	01C12897W01	Assy., Front Panel							
	2	2-F	15C12903W01	Cover, Top							
★	4		15C12902W01	Cover, Rear							
▲	4	4-H	15C12902W01	Cover, Rear							
■	4	4-H	15C12902W03	Cover, Rear							
◆	4		15C12902W01	Cover, Rear							
●	4		15C12902W03	Cover, Rear							
	5	3-D	03S44205G49	Screw, Bind (M4 × 8)							
	6	3-G	43T16093W01	Support, Cord							
	7		03S71031F04	Screw, Bind (M3 × 8)							
	8	2-B	03S71677F08	Screw, Pan (M2.6 × 8)							
	9	4-F	07A91046F01	Support, P.C.B.							
	10	2-D	03C42723U01	Screw, Cup (M3 × 6)							
	11	2-C	47A12896W01	Shaft, Power							
	12	2-C	43T25269W01	Pushing, Rubber							
	13	1-D	03A83946F01	Screw, Special (M3 × 35)							
	14	1-D	04S40071G14	Washer, Spring (M4.1)							
	15	1-D	04S40070G59	Washer, Flat (M4.1)							
	17		03S71031F02	Screw, Bind (M2.6 × 8)							
	20	3-A	36A12937W01	Knob, Power							
	23	3-F	03D40014G09	Screw, W/Washer (M3 × 5)							
◆	26		09T51410F01	Holder, Fuse							
★	26	3-D	09T51410F01	Holder, Fuse							
▲	26	3-D	09T51410F01	Holder, Fuse							
	28	4-C	01T15318W01	Assy., Lug Wire (1P)							
	30	3-C	75S12196W21	Cushion, Rubber							
	31		07A83876F01	Support, FL							
	32		03S40036U01	Screw, W/Washer (M4 × 8)							
	33		75A96563F01	Pad, Trannleg							
	34		03S71677F25	Screw, Bind (M4 × 12)							
	35	2-C	64B10696W04	Tray Z Panel							
	37	3-H	16T82537F01	CAP., Pin Jack							
	38	4-A	36A12907W01	Knob, Tact 10Key							
	39		36A12909W01	Knob, Tact L							
	40	3-A	36A12909W02	Knob, Tact Up							
	41	3-A	36A12909W03	Knob, Tact Down							
	42	1-E	03S13049W04	Screw, Bind (M3 × 33)							

Note: ★: For General European model only (EK), ▲: For West German model only (AD),  
 ■: For North American model only (UZ), ●: For Canadian model only (UQ),  
 ◆: For England model only (AG), Others: Common.

# Exploded View (Cabinet)


1

2

3

4

5

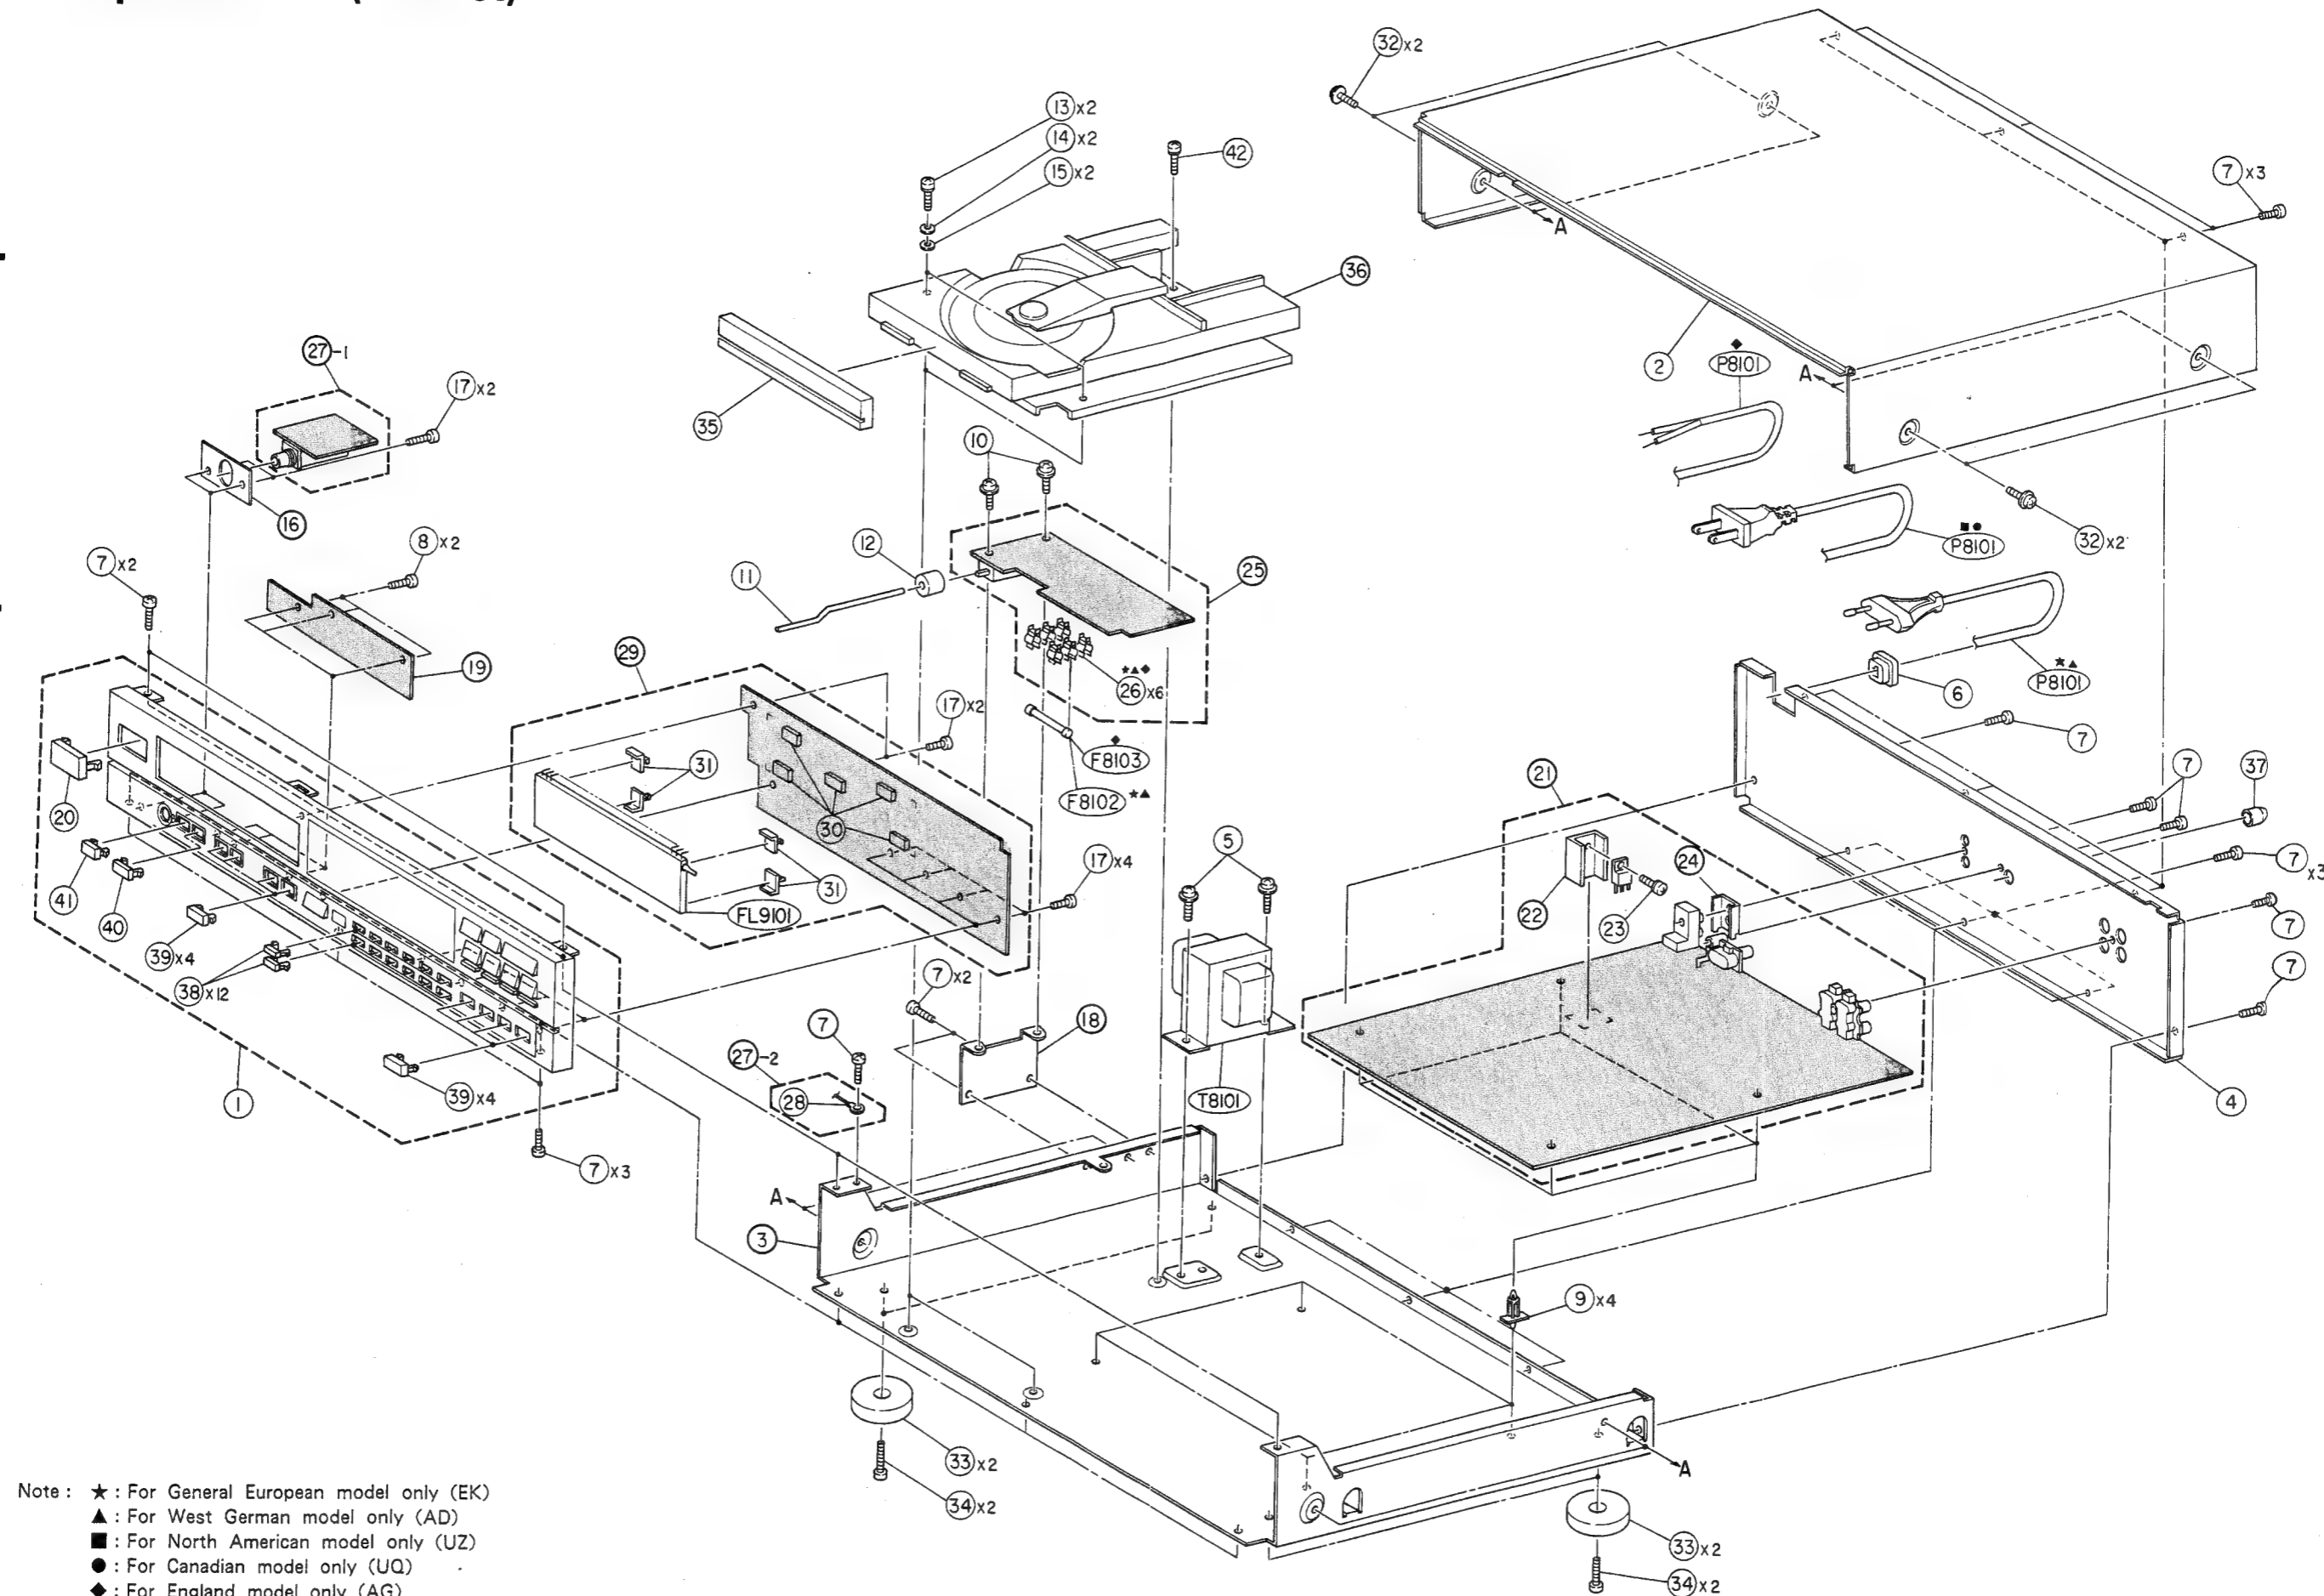

Note: ★: For General European model only (EK)  
 ▲: For West German model only (AD)  
 ■: For North American model only (UZ)  
 ●: For Canadian model only (UQ)  
 ◆: For England model only (AG)  
 Others: Common

A

B - 29 -

C

D

E

F - 30 -


G

H

# Exploded View (CD Mechanism)

DZ-112

DZ-112

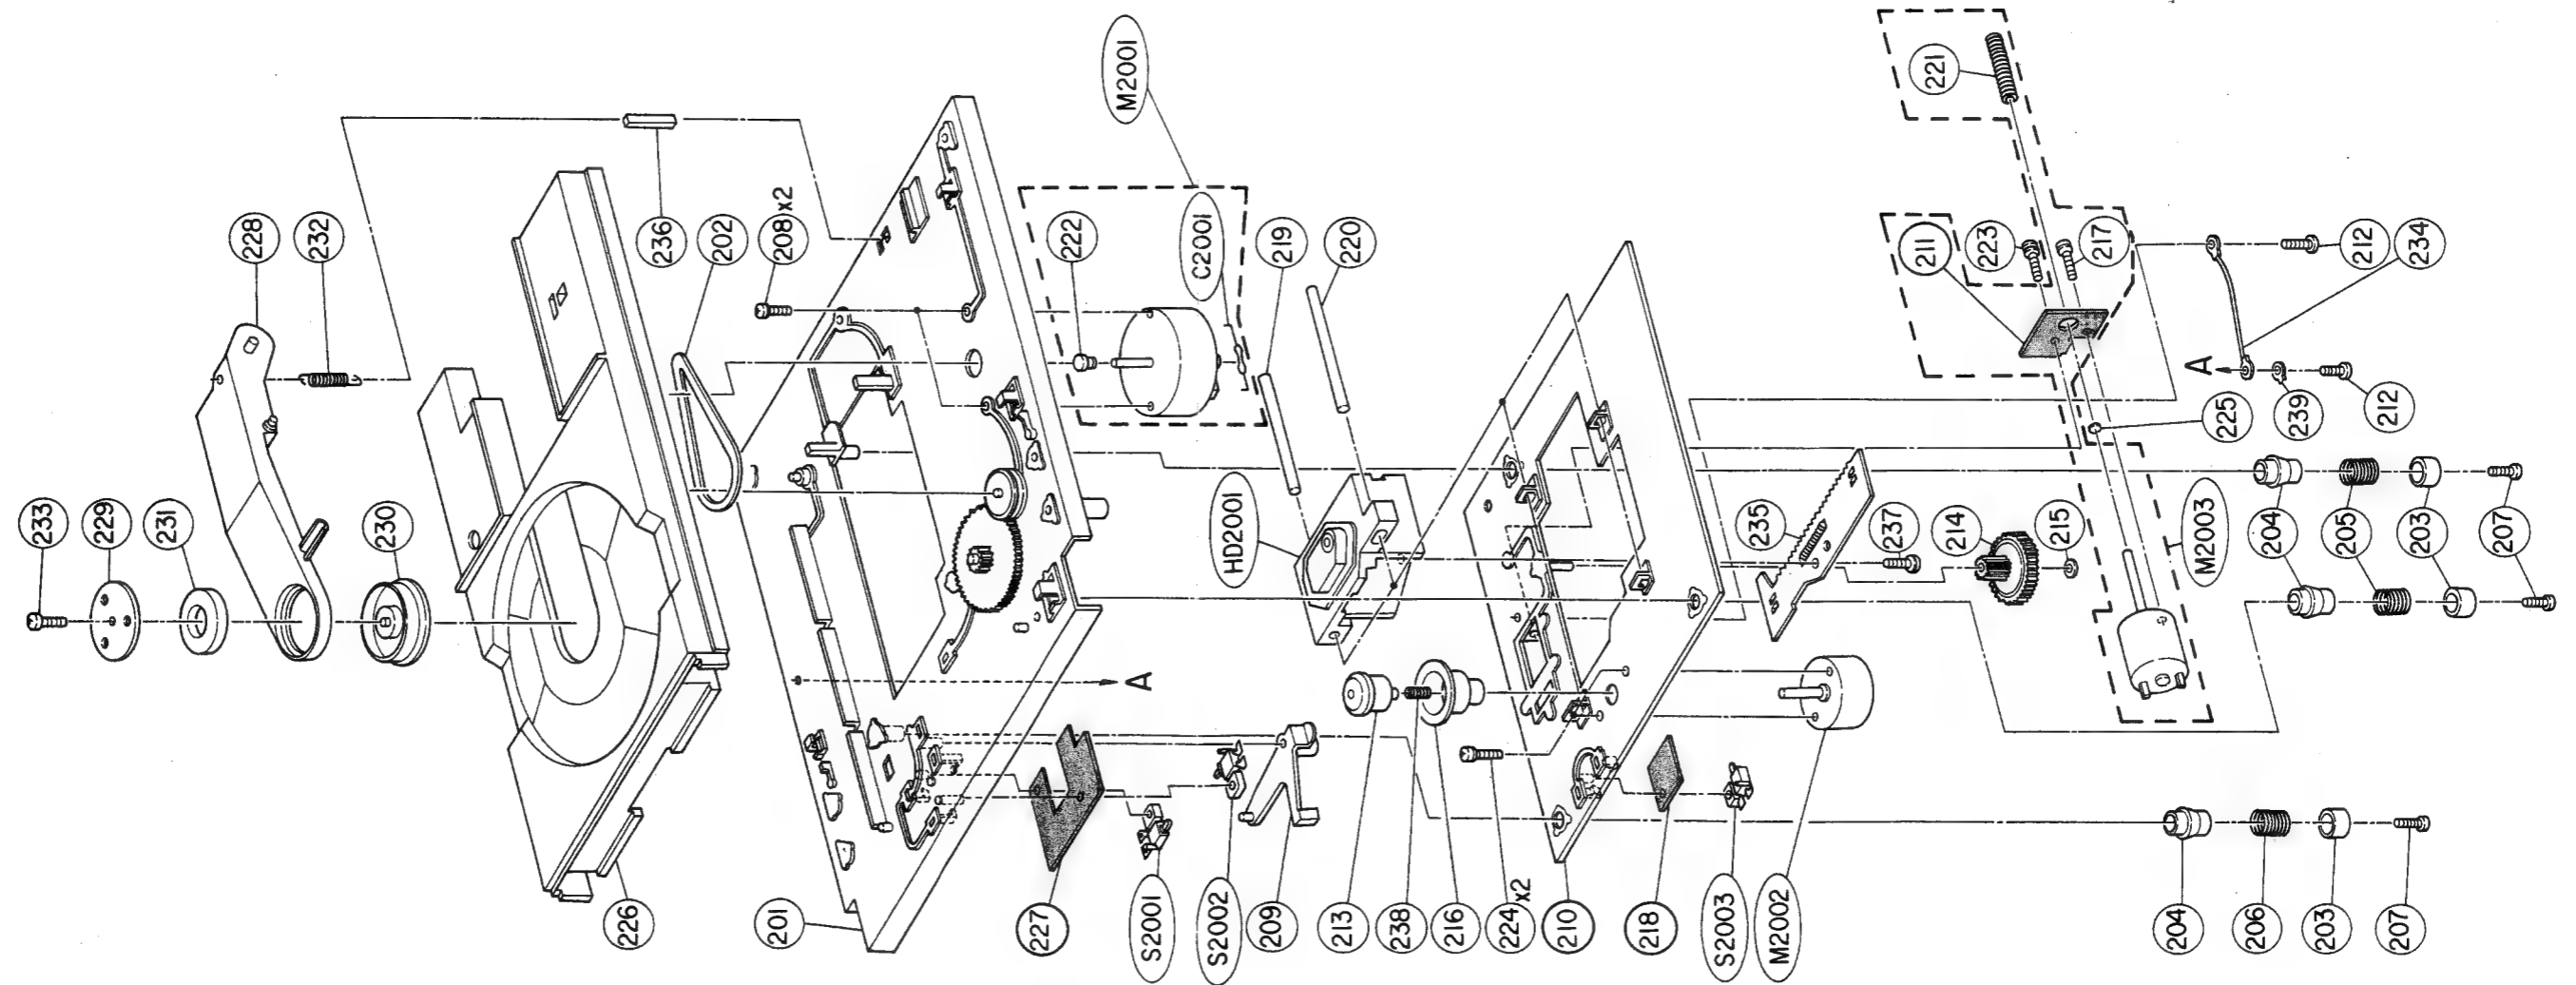

A

B - 31 -

C

D

E

F

- 32 -

G

H

## CD Mechanism Assembly Parts List

Symbol No.	Index	Part No.	Description			Symbol No.	Index	Part No.	Description		
201	4-C	01C82391F02	Assy., Main Chassis								
202	3-C	42A81427F02	Belt, Drive								
203		43A81407F01	Bush, Damper								
204		75A81411F01	Rubber, Damper								
205	3-G	41A81428F03	Spring, Compression								
206	4-G	41A81428F05	Spring, Compression								
207		03S40012G18	Screw, Tapping (M2.6 × 6)								
208	3-C	03D40014G19	Screw, W/Washer (M2.6 × 5)								
209	4-D	45A81434F01	Arm, Switch								
212		03S44205G30	Screw, Pan (M2.6 × 4)								
213	4-E	49B81417F01	Disc, Guide								
214	3-F	44A81401F01	Gear, Worm Wheel								
215	3-G	04A41345P02	Washer, Lock (M1.7)								
216	4-E	49B81414F01	Disc, Table								
217	3-G	03D40014G62	Screw, W/Washer (M2 × 3)								
219	3-D	47A81426F01	Shaft, Head								
220	3-E	47A81426F02	Shaft, Head								
221	2-F	44A96257F01	Worm, Drive								
222	3-D	49A81397F01	Pulley, Loading Motor								
223	3-F	03C40121T31	Screw, W/Double Washer (M2 × 6)								
224	4-E	03D40014G07	Screw, W/Washer (M2 × 4)								
225	3-G	43A41182P02	Ball Steel								
226	4-C	01C10716W01	Assy., Tray Disc								
228	3-B	45C81418F04	Arm, Clamp								
229	3-A	07A81413F02	Bracket, Magnet								
230	3-B	49A81403F01	Wheel, Clamp								
231	3-A	59T81430F01	Magnet								
232	3-B	41B81429F02	Spring, Extension								
233	3-A	03S70494F08	Screw, Bind (M2 × 5)								
234	3-H	01T92483F01	Assy., Lug Wire (1P)								
235	3-F	01A82323F01	Assy., Rack								
236	3-C	75S12196W06	Cushion, Rubber								
237	3-F	03S70494F01	Screw, Bind (M2 × 5)								
238	4-E	41A81428F01	Spring, Compression								
239	3-G	01T84733F11	Assy., Lug Wire								


NOTE: The parts without part numbers are not supplied.

## Packing Assembly Parts List

Symbol No.	Part No.	Description			Symbol No.	Part No.	Description		
101	56S10005W36	Carton, Packing			▲ 105-1	68P96552F35	Owner's, Manual		
102	56D13765W01	Tray, Packing (L)			■ 105-1	68P96552F34	Owner's, Manual		
103	56D13765W02	Tray, Packing (R)			105-2	28T70621F03	Plug, Output		
104	56B40230G23	Sack, Polyethylene			105-3	01T82091F01	Assy., Mini Plug Cord		
★ 105-1	68P96552F35	Owner's, Manual			105-4	01T16150W02	Unit, Remocon RD105U		
● 105-1	68P96552F35	Owner's, Manual							
◆ 105-1	68P96552F35	Owner's, Manual			105-5	60T58064F01	Battery, Sum-3		

Note: ★ : For General European model only (EK), ▲ : For West German model only (AD),  
 ■ : For North American model only (UZ), ● : For Canadian model only (UQ),  
 ◆ : For England model only (AG), Others : Common.


## Packing Method View

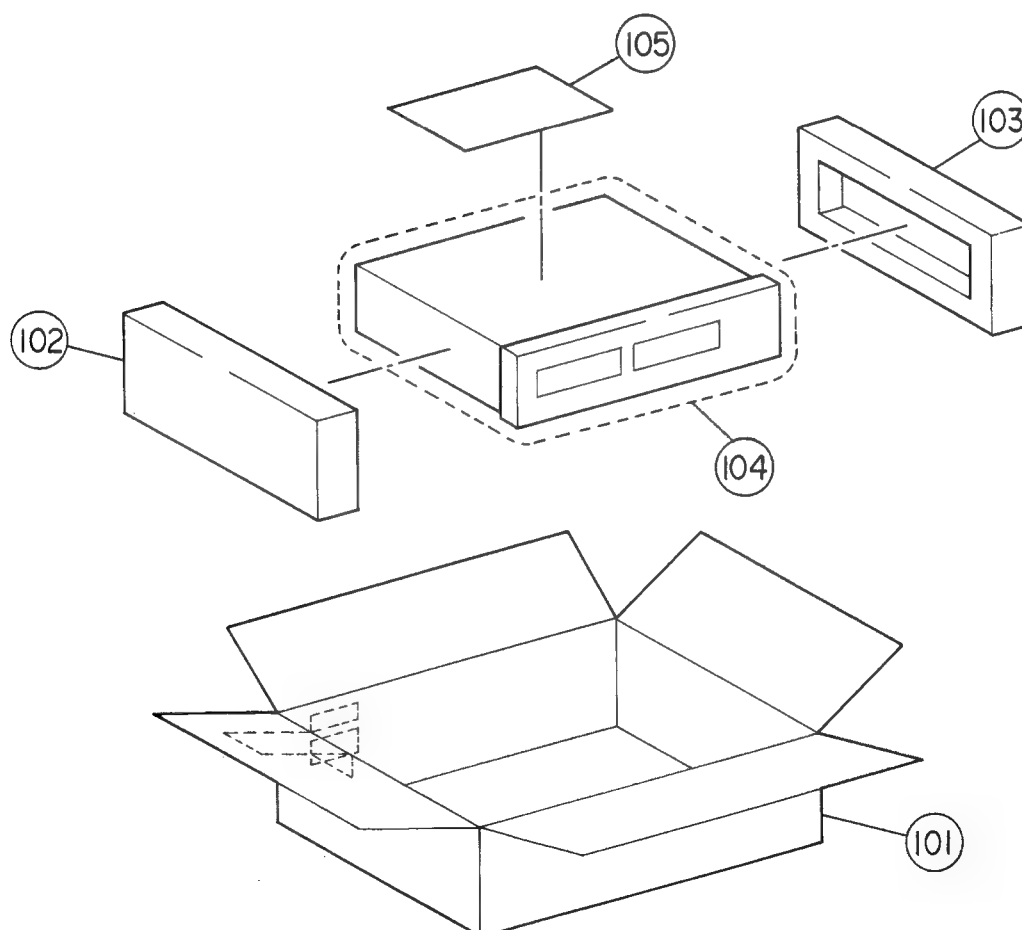


# Semi-Conductor Lead Identifications

MC7912CT : IC1101

 MC7905 : IC1103




1. GND
2. Input
3. Output

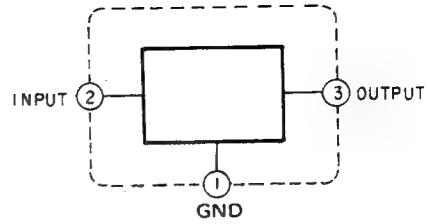




MC7812CT : IC1102

LM2931AT : IC1104


 
MC7805 : IC1406




 
1. Input
2. GND
3. Output

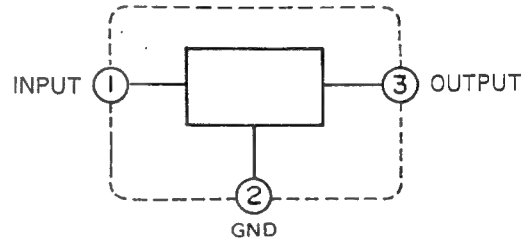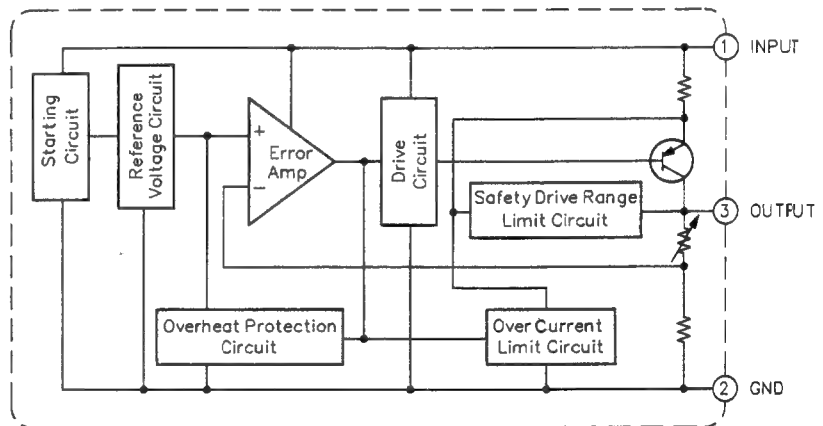 $\mu$  PC2405HF : IC1104



CXA1081S : IC1201

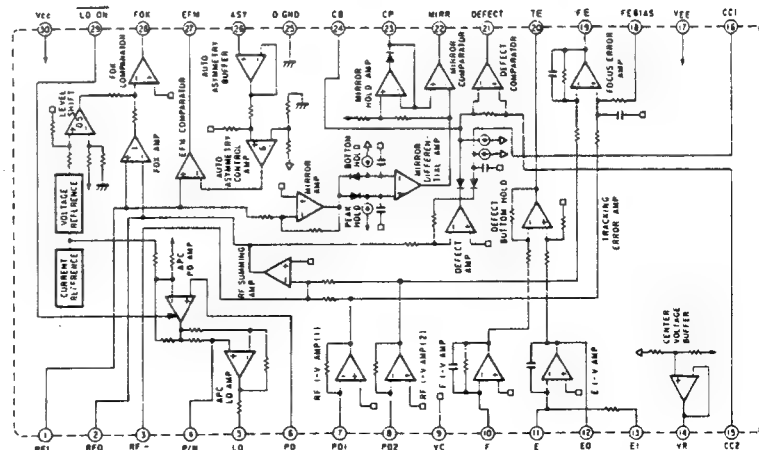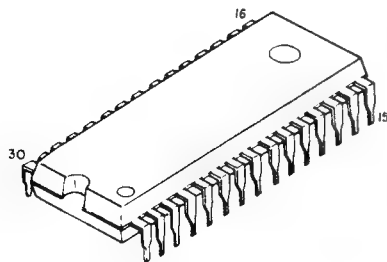



CXD1125QZ : IC1202

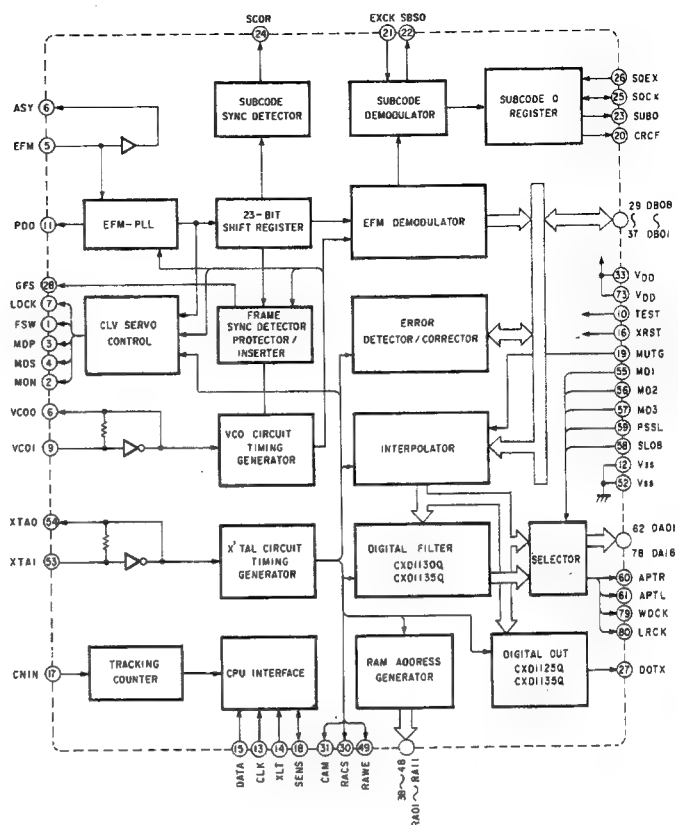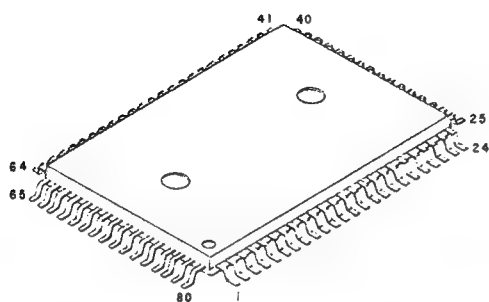



LC3516AS : IC1203

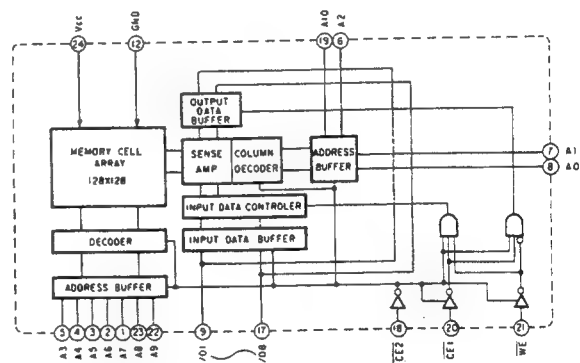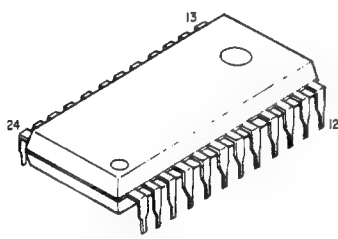



15365W02 : IC1204

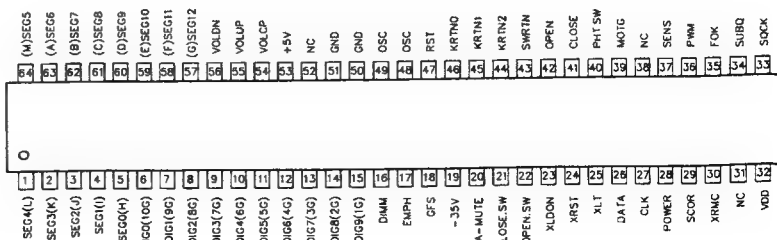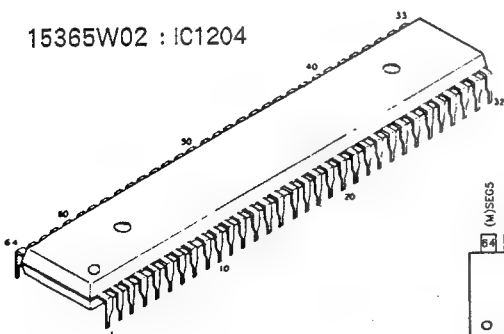



MC74HCU04 : IC1205

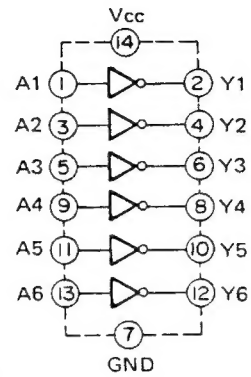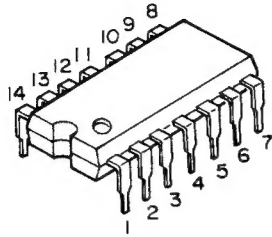

CXA1082BS : IC1301

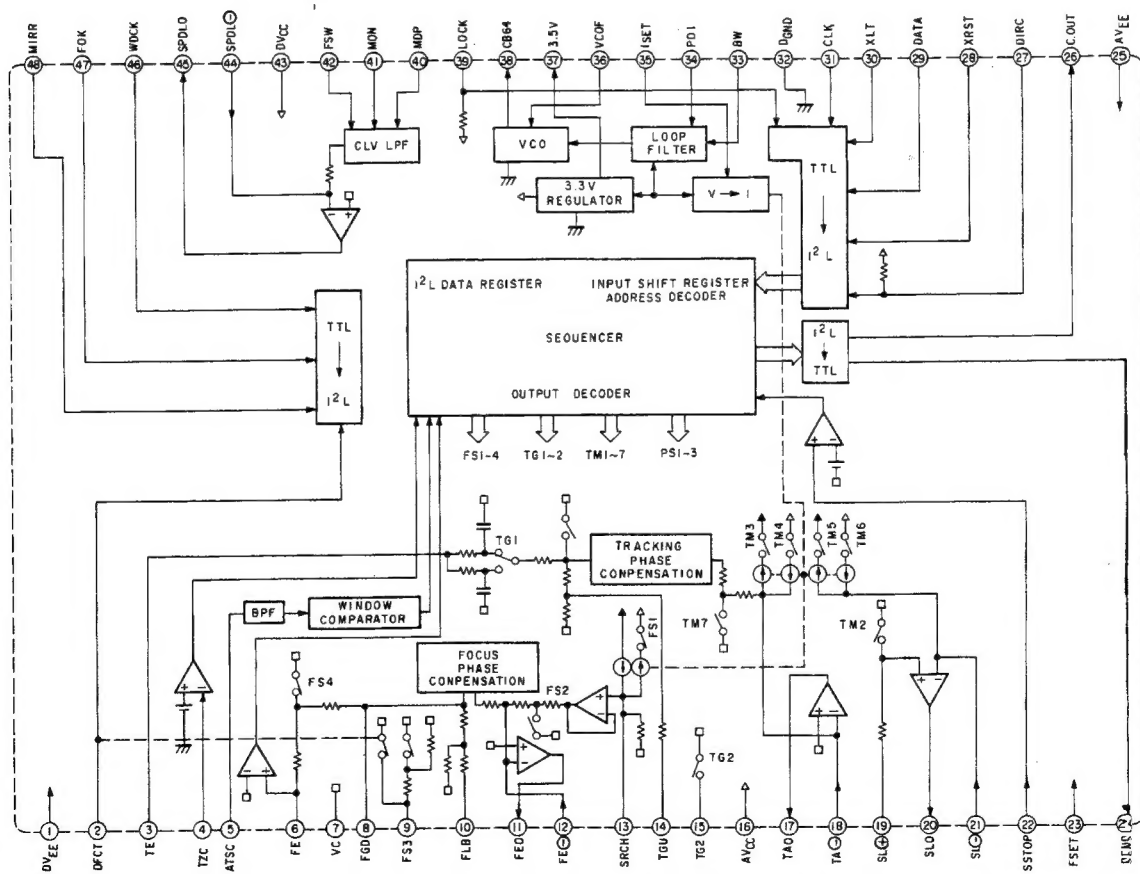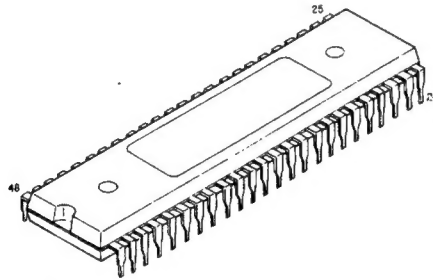



PCM1701P : IC1401, 1402

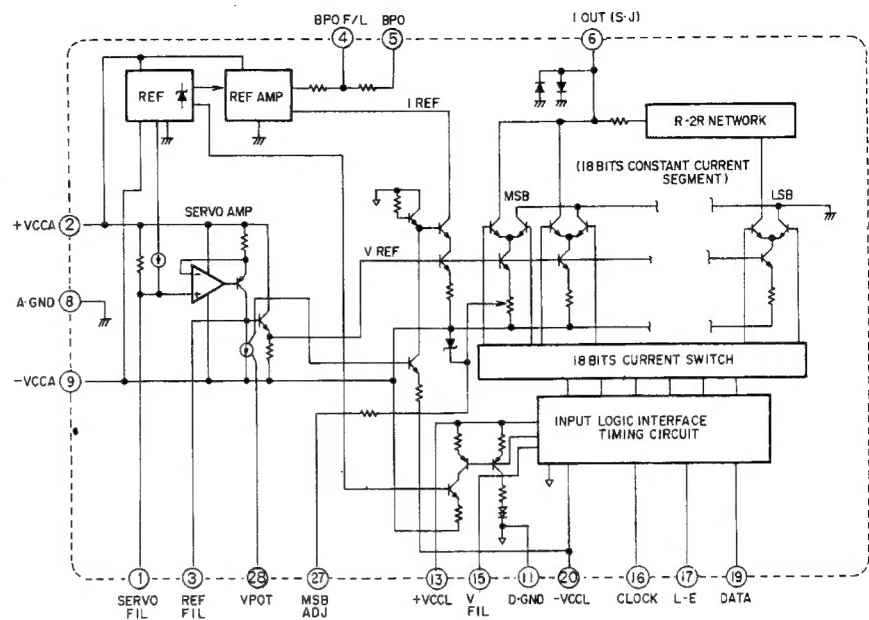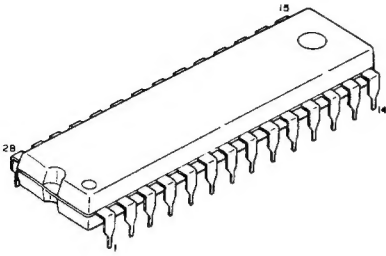


AD42712 : IC1403, 1404

M5216P : IC1405

 
NJM2903D : IC1901

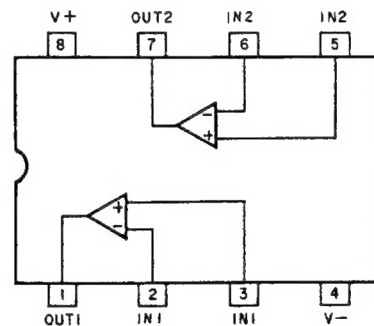




LA6501 : IC1501, 1902

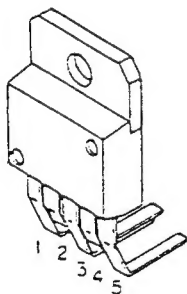


1. +VIN
2. -VIN
3. VEE
4. OUTPUT
5. VCC

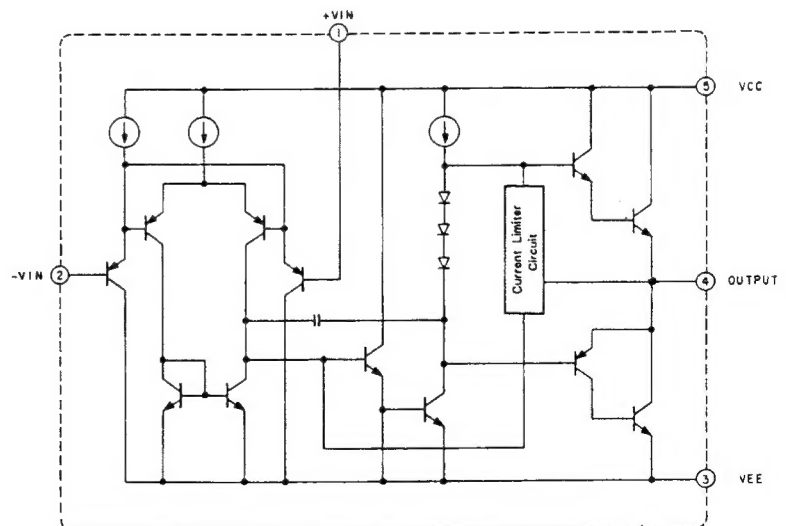




SM5813AP : IC1701

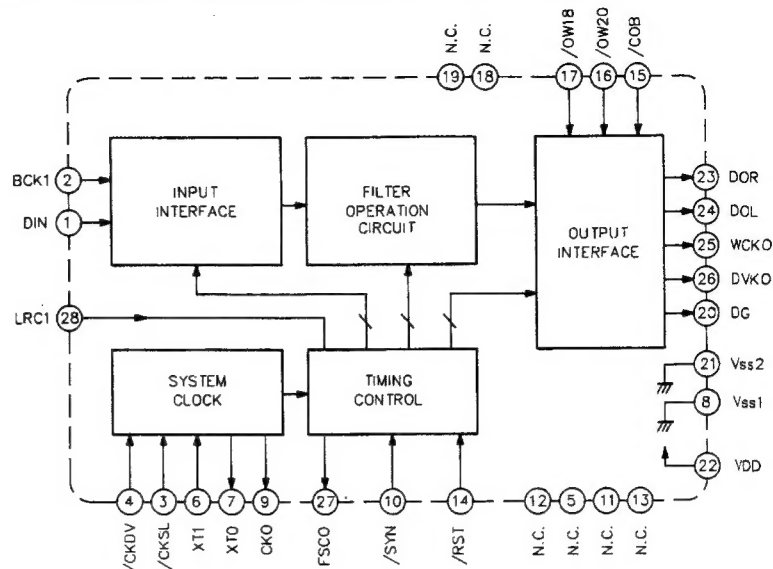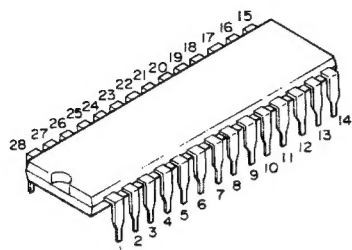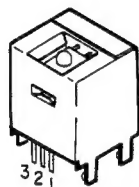GP1U521 : IC9101  
GP1U521X


- ① Vout
- ② Vcc
- ③ GND

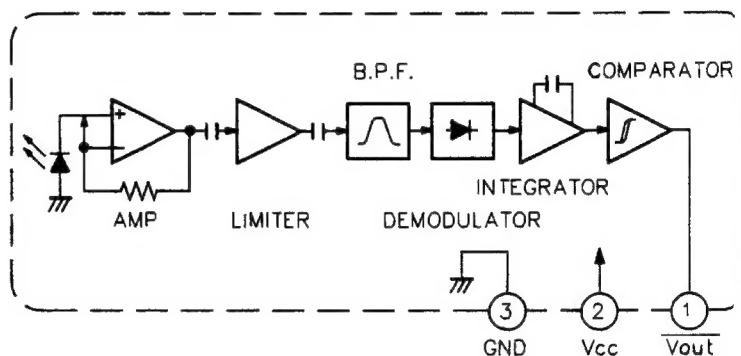



2SA1358 : Q1101

 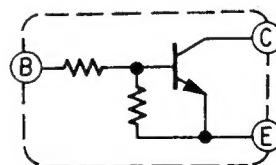 DTC114EL : Q1102, 1309, 1105, 1107, 1108  
DTC144EL : Q1212, 1213


 
2SC4038 : Q1103  
2SB1277 : Q1203  
2SA1561 : Q1214  
2SB1240 : Q1301, 1303, 1305, 1307  
2SD1862 : Q1302, 1304, 1306, 1308  
2SD1996 : Q1403, 1404



DTA114EL : Q1104, 1106

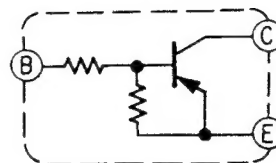 

DTC124TL : Q1211

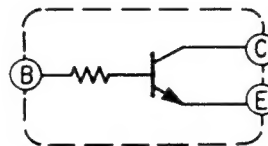 

2SK246 : Q1401, 1402

